

PLATINUM

SERIES

CREST UNIVERSAL

Remote control



INSTRUCTION MANUAL

Table of contents


Picture of the CREST -4 device- universal remote.	3
Installing the batteries.....	4
Features and Functions.....	4
Set Up:	
Setting up your devices	6
The Search Method	7
Blink out the Current Code.....	8
Quick Code Reference.....	8
Changing a Device Key.....	9
Resetting a Device key.....	9
Volume Punch Through	10
Colour & Brightness.....	10
Trouble-Shooting	11
Customer Service	11
Set Up Codes:	
Televisions	12
Video Recorders	18
Satellite Receivers	21
Cable Converters	23
DVD Players	24

About your CREST universal remote.

By choosing the CREST universal remote control you have opted for easy use. Made of the strictest quality, it will provide long-term satisfaction. Please read these enclosed instructions carefully before putting your CREST universal remote to use.

This manual is divided into two parts: Set Up Instructions and Device Codes. You will need your manual to set up your new CREST universal remote so please be sure to keep it.

 Your CREST universal remote control can operate four devices: a Television, a Video Recorder, a Satellite Receiver or Cable Converter and a or DVD Player. It is also possible to operate a second Television, Video Recorder, Satellite Receiver/Cable Converter or DVD Player (see page 9).

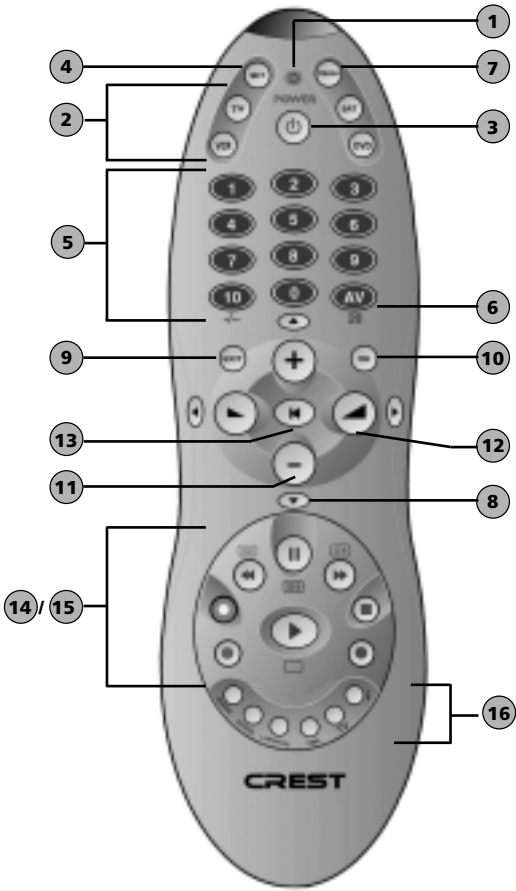

Installing the Batteries

Your CREST universal remote control needs two new AA/LR6 alkaline batteries.

- 1 Remove the battery cover from the back of your CREST universal remote control.
- 2 Match the batteries to the (+) and (-) marks inside the battery case, then insert the batteries.
- 3 Press the battery cover back into place.

Features and Functions

Picture of the CREST universal remote control on page 3.

- 1 **LED**
The LED (Light Emitting Diode) flashes red to show the remote is working.
- 2 **Device keys**
The TV, VCR, SAT and DVD keys select the device to be controlled. For example pressing the TV key allows the remote to control the functions of your Television, after pressing the VCR key you can operate your Video Recorder etc.
- 3 **Power key**
The Power key controls the same function as on your original remote.
- 4 **SET key**
The SET key is used to set up your CREST universal remote control and to access special functions.
- 5 **Number keys**
The number keys (0-9, 10, 20 (AV)) provide functions just like your original remote. If your original remote uses one/two digit input switching (-/-- symbol), this function can be obtained by pressing the -/-- key. If your original remote has a 20 key, this function can be found under the AV key.
- 6 **AV key**
The AV key operates the same function as it did on your original remote control.
- 7 **Menu Key**
The Menu key controls the same function as it did on your original remote.
- 8 **Directional Keys**
If available on your original remote, these keys will allow you to navigate through the menu of your device.
- 9 **The EXIT key**
With the EXIT key you will EXIT the menu.
- 10 **The OK key**
The OK key confirms your choice made in the menu.

- 11 **Programme (+/-) keys**
The Programme (+/-) keys operate just as those on your original remote.
- 12 **Volume (+/-) keys**
The Volume (+/-) keys operate just as those on your original remote.
- 13 **Mute key**
The Mute key operates the same function it did on your original remote.
- 14 **VCR / DVD Keys**
These keys operate the functions of your Video Recorder or DVD player. To prevent accidental recording on your Video or DVD Recorder, the Record key must be pressed **twice** to start recording.
- 15 **Teletext Keys**
After pressing the TV key, these keys are used to operate the main Teletext functions. Of course, your Television must have Teletext capability.
When accessing the text mode, the colour keys marked red, green, yellow and blue, allow you to access the Fasttext functions of your Television. If on your original remote control these keys are used for Menu navigation, the CREST universal remote control Fasttext keys may operate the same.
For a more detailed explanation of Teletext and Fasttext, please refer to the manual of your Television. Remember, different televisions control Teletext and Fasttext functions in different ways. Not all of the Teletext functions may be available on your particular model.

TEXT ON: Puts the television in the Teletext mode.

TEXT OFF: Switches the television back to regular viewing mode. On some televisions, this may be done by pressing the TEXT ON key several times.

HOLD/STOP: Stops changing pages.

EXPAND: Shows the top half of the Teletext page in larger letters. By pressing again, you can see the bottom half of the Teletext page enlarged. To return to regular Teletext viewing, press the EXPAND key again, or press the TEXT ON key, depending on your television.

- 16 **Optional keys**
These keys are designed for use with digital satellites by Foxtel (setup code= 0902), Austar (setup code= 0665) or Pace (setup code= 0520).

Setting up your devices

 
Example: to set up the CREST universal remote control for your Television:

- 1 Find your device code in the code section (page 12 – 25).**
Codes are listed by brand name. The most popular code is listed first. Make sure your television is switched on (not on standby).
- 2 Press and release the TV key.**
- 3 Press and hold down the SET key** until the red light blinks twice (the red light will blink once and then twice).
- 4 Enter your four-digit code** using the number keys.
The red light will blink twice.
- 5 Now, aim your CREST universal remote control at your television and press POWER.** If your television switches off, your CREST universal remote control should be ready to control your television.



- If your device does not respond, follow steps 1 through 5 with each code listed for your brand. If none of the codes listed for your brand operate your device, then try the Search Method described on page 7, even if your brand is not listed at all.
- Some codes are quite similar. If your device does not respond or is not functioning properly with one of the codes, try another code listed under your brand.
- If the original remote control from your Video Recorder did not have a Power key, press PLAY instead of POWER during step 5.
- To set up your other devices, follow the same instructions above, only press the appropriate device key during step 2.
- Write your code in the boxes provided in the battery compartment and on page 8, for quick, easy reference.

Devices can be found under the following keys:

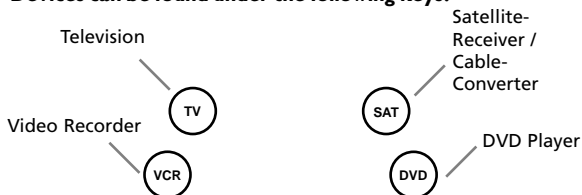

- To set up a second television, video recorder, satellite receiver / cable converter or DVD player see page 9.

The Search Method

If your device does not respond to the CREST universal remote control after you have tried all the codes listed for your brand, try the Search Method. The Search Method may also work if your brand is not listed at all.

Example: to search for your Television Code:

1 **Switch your Television on (not on standby).**

2 Press the **TV** key.



 
3 **Press and hold down the SET** key until the red light blinks twice.



4 Press **9 9 1**, the red light will blink twice.



5 Next press the **POWER** key.



6 Point the CREST universal remote control at your Television. Now press **CH+** over and over, until your Television turns off (every time you press the CH+ key the CREST universal remote control will send out a POWER signal from the next code contained in the memory).



You may have to press CH+ many times (up to 150 times) so please be patient. Remember to keep pointing the CREST universal remote control at your Television while pressing this key. (If you skip past a code, you can go to the previous code(s) by pressing the CH - key.)

7 When your Television switches off, press the **SET** key to store the Code. The red light will blink twice. Now your CREST universal remote control should be ready to control your television.



-
- If you cannot control your Television properly, please continue the Search Method, you may be using the wrong Code.
 - To search for your other devices, follow the same instructions above, only press the appropriate device key during step 2.
 - If your Video's original remote control does not have a POWER key, press PLAY instead of POWER when searching for your Code during step 5.
-

Blink out the Current Code

If you have set up your CREST universal remote control via the Search Method, you can blink back your code for future reference.

Example: To blink out your television code:

1 Press the **TV** key.



2 **Press and hold down the SET** key until the red light blinks twice.



3 Press **9 9 0**, the red light will blink twice.



4 For the first digit of your four-digit code, press **1** and count all the red blinks. If there are no blinks, the digit is "0".



5 For the second digit, press **2** and count all the red blinks.



6 For the third digit, press **3** and count all the red blinks.



7 For the fourth digit, press **4** and count all the red blinks.



- *To blink back the code for your other devices follow the instructions above, only press the appropriate device key during step 1.*

Quick Code Reference

Write down the codes for your devices in the boxes below and in the battery compartment for quick and easy reference.

Device type

Code

1.

--	--	--	--

2.

--	--	--	--

3.

--	--	--	--

4.

--	--	--	--

Changing a Device key

It is possible to change any device key.

Example 1:

To program a second television on the VCR key you need to change the VCR key into a TV key:

1 

The VCR key has now become a second TV key.

2 Now enter the Set Up code for your second TV by pressing:




Example 2:

To program a second television on the DVD key you need to change the DVD key into a TV key:

1 

The DVD key has now become a second TV key.

2 Now enter the Set Up code for your **second TV** by pressing:



Example:

To program a second DVD player on the SAT key you need to change the SAT key into a DVD key:

1 

The SAT key has now become a second DVD key.

2 Now enter the Set Up code for your **second DVD Player** by pressing:



Resetting a Device Key

Example 1: To reset the VCR key to its original mode, press:



Example 2: To reset the SAT key to its original mode, press:



(*) **Hold down the SET key until the red light blinks twice (the red light will blink once then twice).**

(**) **The red light blinks twice.**

Volume Punch Through

This feature allows you to adjust the volume in a certain mode (e.g. TV mode) while being in a different mode.

Last key pressed: **You can control:**

VCR	TV volume up and down, mute
SAT	TV volume up and down, mute
DVD	TV volume up and down, mute

Example: To punch through to TV volume, being in any other mode (VCR, SAT/CBL or DVD mode):

- 1 **Press and hold down the SET** key until the red light blinks twice (the red light will light up once then twice).
- 2 Press **9 9 3**.
- 3 Then press the **TV** key and the red light will blink twice.

Example: being in any (e.g. DVD) mode, you will be able to control VOL+/- or MUTE functions of your TV.

To cancel the "Volume Punch Through" per mode:

(Example: to cancel the "Volume Punch Through" for the VCR mode)

- 1 Press **VCR** once.
- 2 **Press and hold down the SET** key until the red light blinks twice (the red light will light up once then twice).
- 3 Press **9 9 3**.
- 4 Then press the **VOL (-)** key and the red light will blink four times.

Example: being in VCR mode, you will be able to control VOL+/- or MUTE functions of your VCR (provided it has volume control).

To cancel the "Volume Punch Through" for all modes:

- 1 **Press and hold down the SET** key until the red light blinks twice (the red light will light up once then twice).
- 2 Press **9 9 3**.
- 3 Then press the **VOL (+)** key and the red light will blink four times.

- In all modes the VOL+, VOL- and MUTE keys will now operate the original functions again.

Colour & Brightness

Depending on the functions of your original remote control, the CREST universal remote control can operate the colour and brightness settings of your Television.

To adjust the colour:

Press the **SET** key followed by **Volume +** (for colour +) or **Volume -** (for colour -).

To adjust the brightness:

Press the **SET** key followed by **Channel +** (for brightness +) or **Channel -** (for brightness -).

Trouble-Shooting

Problem:	Solution:
<i>Your brand is not listed in the CREST universal remote control code section ?</i>	Try the Search Method on page 7.
<i>The CREST universal remote control does not operate your device(s) ?</i>	A) Try all the codes listed for your brand. B) Try the Search Method on page 7.
<i>The CREST universal remote control is not performing commands properly ?</i>	You may be using the wrong code. Start the Search method over again to locate the proper code.
<i>Problems changing channels ?</i>	Enter the programme number exactly as you would on your original remote.
<i>Video / DVD not recording ?</i>	As a safety feature on your CREST universal remote control, you must press the Record key twice.
<i>The CREST universal remote control does not respond after pressing a key ?</i>	Make sure you are using new batteries and are aiming the CREST universal remote control at your device.
<i>The red light does not blink when you press a key ?</i>	Replace batteries with 2 fresh, new AA/LR6 alkaline batteries.

Customer Service

If you have any questions about the operation of your new CREST universal remote control, Universal Remote Control, you may call our Customer Service for assistance. Before calling please read this manual carefully to find an answer to your question. If you cannot find a solution in this manual, please complete the information below on all your equipment before calling.

Your CREST universal remote control model: URC 4140

Date of purchase: / /

Day / Month / Year

A list of your equipment/models: (see example below)

Type	Brand	Model No.	Remote Model No.	CREST Code
TV	Saba	TCW 301	MB 100	0648 (ex)

Type/model numbers can often found in your equipment owner's manual or on the factory plate behind the device.

In Australia: **1 800 812 261**

opening hours: 8.00 am- 5.00 pm (Mon-Fri.)

Televisions

A.R. Systems	0060	0579			
Abex	0055				
Accent	0060	0579			
Accuphase	0579	0647			
Acec	0035				
Adcom	0648				
Admiral	0116	0386	0441	0110	0328
	0186	0287			
Adyson	0240	0239	0055		
AEA	0060	0579			
Agashi	0239	0287	0240		
AGB	0539				
Agef	0110				
Aiko	0032	0060	0579	0239	0394
	0058	0456	0095	0384	0214
	0287	0240			
Aim	0060	0095	0435	0579	0776
Aiwa	0728	0724			
Akai	0384	0231	0394	0060	0456
	0768	0214	0058	0032	0095
	0241	0737	0186	0539	0738
	0625	0579	0571	0604	0503
	0240	0654	0239	0287	0471
	0201	0400	0629	0731	1060
Akiba	0241	0305	0478	0060	0579
	0317				
Akito	0295	0060	0579		
Akura	0060	0579	0691	0382	0435
	0516	0032	0241	0305	0287
	0194				
Alaron	0202	0239			
Alba	0032	0441	0393	0258	0394
	0691	0060	0579	1060	0378
	0241	0239	0270	0454	0186
	0510	0604	0059	0602	
Alkos	0058				
Allorgan	0229	0317	0240		
Allstar	0060	0579			
Ambassador	0200				
Amplivision	0240	0423	0393	0343	
Amstrad	0200	0032	0539	0287	0377
	0394	0241	0194	0060	0579
	0456	0435	1060	0671	0604
Anam	0060	0579	0032	0273	
Anam National	0060	0273	0579	0673	
Anex	0444				
Anglo	0032	0287			
Anitech	0032	0287	0060	0579	0305
	0125				
Ansonic	0393	0060	0579	0032	0691
	0397	0186	0315	0125	0434
	0282	0270	0035	0451	0127
Apollo	0496				
Arc en Ciel	0422	0132	0219	0221	
Arcam	0239	0422	0240		
Ardem	0509	0737	0060	0579	
Aristona	0579	0060	0035		
Arthur Martin	0186	0423			
ASA	0128	0369	0093	0127	0110
Asberg	0060	0579	0125		
Asora	0032				
Astra	0060	0579			
Asuka	0241	0240	0239	0287	0305
Atlantic	0060	0579	0239	0229	0343
	0282				
Atori	0032				
Auchan	0186	0423			
Audiosonic	0032	0060	0397	0579	0132
	0737	0738	0240	0393	0360
	0287	0241	0509	0451	
Audioton	0240	0509	0393	0287	0451
Autovox	0110	0229	0372	0240	0270
AWA	0034	0059	0032	0180	0397
	0435	0060	0579	0239	0629
	0240	0131	0287		
Axxent	0032				
Axxon	0737				

Baird	0132	0216	0366	0213	0215
	0095	0096	0240	0231	
Bang & Olufsen	0588	0110	0298		
Barco	0403	0186			
Basic Line	0397	0060	0186	0691	0579
	0032	0241	0590	0305	0240
	0478				
Bastide	0240				
Baur	0169	0326	0558	0218	0535
	0060	0579	0577	0214	0384
	0372	1528	0528	1033	
Bazin	0240				
Beaumarck	0201				
Beko	0509	0058	0451	0737	0393
	0060	0579	0629	0738	
Beon	0060	0579	0441	0055	
Berthen	0691				
Best	0360	0393	0444		
Bestar	0060	0579	0393	0397	
Bestar-Daewoo	0397				
Binatone	0240				
Black Diamond	1060	0579			
Black Panther	0125				
Black Star	0270				
Black Strip	0058				
Blacktron	0305				
Blackway	0305	0241			
Blaupunkt	0577	0214	0558	0218	0223
	0350	0351	0471	0478	0193
Blue Sky	0060	0737	1060	0510	0691
	0738	0647	0579	0241	0305
	0478				
Blue Star	0305				
Bondstec	0270				
Boots	0295	0240	0032		
Bosch	0343	0350			
BPL	0060	0579	0305		
Brandt	0648	0132	0422	0219	0221
	0310	0358	0494	0366	
Brandt Electronique	0310	0358			
Brinkmann	0060	0579	0691	0542	0441
	0509				
Brionvega	0060	0579	0110		
Britannia	0239	0240			
Brother	0287				
Bruns	0110	0451			
BSR	0186	0317	0384		
BTC	0241				
Bush	0691	0241	0186	0372	0032
	0059	0060	0394	0258	0305
	0295	0378	0386	0397	0542
	0287	0384	1060	0510	0231
	0240	0637	0640	0721	0604
	0317	0579	0737		
Canton	0241				
Capsonic	0287				
Carad	0633	0060	0579	0691	
Carena	0478	0060	0579		
Carrefour	0059	0093	0060	0579	
Carver	0193				
Cascade	0032	0060	0579		
Casio	0060	0579	0186	0372	
Cathay	0060	0579			
CCE	0060	0579	0240		
Centrum	1060				
Centurion	0060	0579			
Century	0110	0270	0261		
CGE	0097	0107	0441	0270	0393
	0186	0422			
Cimline	0032	0258	0241		
Citizen	0083				
City	0032				
Clarivox	0441	0060	0579	0093	0125
Clatronic	0060	0393	0394	0737	0241
	0287	0579	0240	0270	0032
	0125	0343	0602	0671	
Clayton	0408	1060			

CMS 0239
 CMS hightec 0240
 Concorde 0032
 Condor 0343 0060 0579 0393 0239
 0032 0305 0125 0270 0441
 0434 0186 0287
 Conic 0055
 Conrad 0060 0579
 Contec 0239 0032 0180 0034 0059
 0287 0060 0579
 Continental
 Edison 0132 0219 0221 0422 0310
 0510
 Cosmel 0032 0360 0060 0579
 Crosley 0110 0270 0097 0107 0186
 Crown 0032 0393 0509 0060 0579
 0510 0737 0629 0738 0444
 0441 0382 0602 0231 0076
 0362
 Crystal 0454
 CS
 Electronics 0239 0241 0270
 CTC 0270
 Curtis
 Mathes 0083 0116 0168 0189
 Cybertron 0241
 D-Vision 0060 0579
 Daewoo 0657 0647 0397 0522 0060
 0579 0032 0239 0241 0240
 1160
 Dainichi 0241 0239
 Dansai 0060 0579 0287 0055 0058
 0239 0032 0059 0240
 Dansette 0435
 Dantax 0393 0509 0737 0629 0738
 Datsura 0231
 Dawa 0060 0579
 Daytron 0032 0397 0060 0579
 de Graaf 0231 0067 0186 0571 0386
 Decca 0095 0539 0060 0579 0295
 0240 1160
 Deitron 0060 0579 0397 0241
 Denko 0287
 Denon 0168
 Denver 0060 0579 0629
 DER 0216 0213
 Desmet 0343 0060 0579 0032 0110
 Diamant 0060 0579
 Diamond 0287 0721 0719
 Digatron 0060 0579
 Digiline 0060 0579
 Digator 0060 0579
 Digivision 0384
 DiK 0060 0579
 Dixi 0032 0060 0579 0270 0240
 0110
 Domeos 0691
 Domland 0417
 Doric 0372
 DTS 0032
 Dual 0372 0240 0366 0542 0060
 0579 0282 0417 0422 0326
 0186 0554
 Dumont 0110 0127 0125 0240 0093
 0095
 Dunai 0186
 Dux 0060 0579 0035
 Dynatron 0060 0579 0035
 E-Elite 0241
 Edison-
 Minerva 0510
 Elbe 0458 0261 0282 0315 0393
 0186 0060 0579 0241 0214
 0434 0633 0240 0539 0384
 0653
 Elbe-Sharp 0539
 Elicit 0110 0270 0539 0125 0186
 Elekta 0032 0060 0579 0287 0305
 ELG 0060 0579
 Elin 0239 0060 0579 0128 0127
 0571 0384 0471 0328 0372
 0186 0032

Elite 0241 0060 0579 0343 0328
 Elman 0125
 Elta 0032 0287 0239 0454
 Emco 0270
 Emerson 0200 0201 0110 0202 0270
 0060 0579 0394 0093 0305
 0343 0384 0647 0509 0393
 0186 0344
 Emperor 0305
 Enzer 0719 0776
 Erres 0060 0579 0035
 ESC 0060 0579 0240
 Estèle 0186
 Etron 0060 0579 0032 0186
 Eurofeel 0287 0240
 Euroman 0239 0287 0060 0579 0240
 0444 0393
 Europa 0060 0579
 Europhon 0060 0539 0125 0186 0240
 0579 0270 0454 0239
 Excel 0060 0579
 Expert 0229 0423 0282 0186 0328
 Exquisit 0060 0579 0270
 Fagor 0060 0579
 Family Life 0060 0579
 Fenner 0397 0032
 Ferguson 0096 0648 0310 0215 0213
 0358 0261 0216 0132 0583
 0060 0579 0058 0366 0076
 0117 0127 0131 0384 0494
 Fidelity 0186 0535 0386 0060 0579
 0394 0435 0554 0216 0239
 0287
 Filsai 0240
 Finlandia 0231 0369 0382 0571 0384
 0186 0386 0095 0310 0366
 0068
 Finlux 0128 0127 0060 0579 0737
 0369 0240 0095 0186 0539
 0738 0093 0110 0202 0125
 0434 0654 0515 0503 0496
 0441 0629
 Firstline 0060 0579 0397 0691 0737
 0647 0186 0032 0317 0344
 0239 0408 0270 0125 0240
 0434 0372 0554 0261 0095
 0258 0231 0384
 Fisher 0127 0240 0059 0231 0393
 0578 0068 0110 0180 0384
 0186 0326 0372 0095
 Flint 0060 0579 0633 0095 0241
 0478 0287
 FNR 0125
 Forgestone 0216
 Formenti 0186 0060 0579 0509 0239
 0110 0343
 Formenti-
 Phoenix 0239 0343
 Fortress 0116 0110
 Fraba 0060 0579 0393 0554
 Friac 0032 0060 0579 0125 0444
 0393 0522 0678
 Frontech 0270 0287 0372 0386 0454
 0471 0240 0032 0186
 Fujitsu 0202 0229 0095 0125 0240
 0186 0666 0032 0706 0060
 0579 0384 0282
 Fujitsu
 General 0032 0240 0229 0186
 Funai 0691 0287 0202 0317 0326
 0435
 Future 0060 0579
 Galaxi 0125 0060 0579 0384 0186
 Galaxis 0393 0441 0060 0125 0579
 Galeria 0032
 GBC 0186 0032 0397 0241 0386
 GE 0366 0201 0305 0583 0310
 0132 0358
 Geant Casino 0186 0423
 GEC 0186 0384 0372 0060 0539
 0579 0066 0095 0240
 Geloso 0270 0032 0386 0186 0397

General 0613 0132 0310 0494
 General Electric 0366 0310
 General Technic 0032
 Genesis 0032
 Genexxa 0241 0060 0579 0435 0516
 0186 0032
 Giant 0240
 Goldfunk 0691
 Goldhand 0239
 Goldline 0360
 GoldStar 0060 0032 0393 0313 0055
 0400 0240 0201 0270 0239
 0579 0454 0186 0384 0132
 0386 0629 0067
 Gooding 0510
 Goodmans 0657 0397 0647 0060 0522
 0579 1060 0691 0059 0287
 0095 0539 0032 0313 0202
 0510 0387 0394 0366 0258
 0058 0503 0583 0055 0240
 0358 0241
 Gorenje 0393 0444
 GPM 0241
 Graduate 0076 0193 0060 0579
 Graetz 0384 0394 0186 0060 0362
 0579
 Gran Prix 0671
 Granada 0060 0579 0423 0249 0379
 0382 0035 0068 0095 0169
 0131 0231 0240 0059 0362
 0539 0496 0358 0583 0186
 0386 0248 0366 0571
 Grandin 0060 0579 0032 0186 0633
 0737 0738 0691 0397 0343
 0305 0241 0478 0423 0602
 0125 0240 0186
 Gronic 0558 0218 0214 0577 0510
 Grundig 0093 0729 0060 0579 0610
 0032 0059 0466 0393 0763
 Grunpy 0202
 Haier 0721 0287
 Halifax 0287 0239 0240
 Hampton 0239 0240
 Hanimex 0317 0241
 Hanseatic 0060 0579 0522 0542 0372
 0186 0384 0315 0305 0417
 0343 0657 0451 0393 0032
 0317 0240 0454 0110 0400
 Hantarex 0032 0060 0579 0125 0539
 Hantor 0060 0579
 Harley Davidson 0202 0066
 Harwood 0032 0435 0055 0060 0579
 Hauppauge 0060 0579
 HCM 0032 0435 0060 0579 0240
 0241 0441 0305 0287
 Hedzon 0579 0060
 Hema 0240 0032
 Hemmermann 0372
 Hifivox 0132 0219 0422 0221
 Higashi 0239
 Highline 0287 0060 0579
 Hikona 0241
 Hinari 0231 0060 0579 0032 0241
 0059 0202 0186 0387 0378
 0466 0510 0258 0317 0287
 0305 0241 0423 0478 0633
 Hitachi 0110
 Hitachi 0248 1248 0372 0059 0379
 0067 0066 0131 0496 0186
 0366 0601 0219 0221 0240
 0055 0217 0539 0095 0504
 0522 0060 0586 0168 0579
 0132 0386 0571 0742 0657
 0767 0201 1160 0128 0515
 0382 0384 0535 0503 1068
 Hitachi Fujian 0131 0248
 Hitsu 0032 0478 0241 0633
 HMV 0110

Hornophone 0060 0579 0035
 Hoshai 0241 0478
 Huanyu 0397 0239
 Hygashi 0240 0239
 Hyper 0032 0239 0240 0270
 Hypersonic 0384
 Hypson 0060 0579 0737 0738 0287
 0240 0305 0478 0423 0261
 Hyundai 0060 0579
 Iberia 0060 0579
 ICE 0287 0060 0394 0032 0579
 0241 0240 0239
 Ices 0241 0239
 Icos 0035
 Ict 0060 1160 0579
 Imperial 0060 0186 0393 0097 0107
 0579 0653 0434 0384 0372
 0441 0270 0219 0454 0554
 Indiana 0060 0579
 Ingelen 0510 0633 0737 0186 0384
 Ingersoll 0032
 Inno Hit 0032 0095 0060 0579 0241
 0313 0240 0539 0270 0125
 0305
 Innovation 0542 0060 0579
 Interactive 0060 0579 0035 0110 0535
 0298 0350 0186 0384 0393
 0132
 Interbuy 0032 0060 0287 0270 0535
 0579
 Interfunk 0060 0579 0035 0110 0535
 0298 0350 0186 0384 0393
 0132 0372 0270
 Internal 0060 0579 0647 0522 0397
 International 0239
 Intervision 0305 0240 0478 0060 0394
 0400 0542 0471 0509 0393
 0417 0510 0241 0125 0454
 0186 0287 0270 0032 0579
 Irradio 0032 0060 0579 0241 0270
 0313 0394
 Isukai 0241 0060 0579 0305 0478
 ITC 0240 0343
 ITS 0060 0394 0241 0305 0287
 0239 0032 0579
 ITT 0186 0503 0372 0384 0496
 0571 0590 0216 0369 0362
 0231 0202 0633
 ITT Nokia 0384 0571 0186 0496 0503
 0372 0369 0231 0202 0362
 0590 0629 0633 0654 0386
 ITV 0287 0060 0579 0270 0397
 Jean 0059
 JEC 0058
 JMB 0060 0522 0657 0397 0579
 0466
 Jocel 0735
 Jubilee 0579
 JVC 0676 0076 0117 0213 0059
 0666 0215 0216 0394 0241
 0629 0441
 Kaisui 0241 0305 0060 0579 0239
 0478 0240 0032
 Kamp 0239
 Kapsch 0186 0384 0229 0282 0127
 Karcher 0060 0579 0444 0393 0633
 0186 0305 0125 0287
 Kathrein 0579 0060
 Kawa 0394
 Kawasho 0239
 KB Aristocrat 0186
 Kendo 0633 0060 0579 0186 0542
 0535 0393 0400 0386 0451
 0434 0125 0258 0270
 Kennedy 0186 0229 0458
 Kenwood 0128
 Kingsley 0239
 Kiton 0579 0060
 Kneissel 0060 0393 0633 0434 0397
 0522 0579 0458 0282 0315
 0261
 Kolster 0060 0579 0125 0372

Konka	0060	0579	0394	0737	0441	Medion	0060	0691	0542	0535	0579
	0241	0748	0749				1160	0721			
Kontakt	0510					Megas	0633				
Korpel	0060	0579				Megatron	0168	0201			
Korting	0110	0444	0393	0343		Meletronic	0369	0060	0535	0132	0366
Kosmos	0060	0579					0270	0128	0127	0397	0032
Kotron	0435	0287					0240	0503	0515	0239	0434
Koyoda	0032						0372	0186	0310	0579	0647
Kraking	0261						0657	0384	0214	0218	
Kriesler	0035					Melvox	0423				
KTV	0240					Memorex	0032	0201	0273	0149	0083
Kuba	0372	0186				Memphis	0360	0095	0032	0408	
Kuba						Mercury	0060	0032	0579		
Electronic	0326	0372	0186			Metz	0218	0558	0470	0577	0214
Kyoshu	0435	0441	0287	0055			0390	0411	0060	0110	0579
Kyoto	0408	0055	0186	0239	0240		0298	0610	0691	1060	
LaSAT	0509	0393				MGA	0201	0060	0579	0241	0127
Leader	0032					Micromaxx	0060	0579	0691	1060	0653
Lecson	0060	0579				Midland	0055				
Lemair	0434	0055				Minato	0060	0579			
Lenco	0060	0032	0186	0397	0579	Minerva	0510	0558	0218	0093	0214
	0127						0577	0539	0131		
Lenoir	0032					Minoka	0435	0060	0579	0382	
Lesa	0270					Mistral					
Levis Austria	0060	0579				Electronics	0216				
Leyco	0287	0095	0060	0579	0317	Mitsubishi	0131	0116	0535	0060	0201
	0602						0377	0110	0059	0216	0558
LG	0060	0393	0032	0400	0055		0579	0231			
	0240	0579	0737	0270	0239	Mitsuri					
	0454	0313	0186	0201	0384	General	0186				
	0629	0132				Mivar	0315	0313	0314	0393	0239
Liesenk &							0632	0539	0240		
Tter	0350	0060	0579			Monaco	0032				
Liesenkotter	0060	0350	0351	0035	0579	Morgan's	0060	0579			
Lifetec	0060	0032	0542	0397	0666	Motorola	0116				
	0691	0535	0678	1060	1160	MTC	0083	0393	0372	0535	0186
	0579	0241	0287				0239	0384	0471		
Lloyd's	0032					MTEC	0295	0055			
Lloytron	0055					Multi-					
LME	0454					broadcast	0216				
Loewe	0535	0060	0579	0678	0393	Multi-					
	0110	0315				standard	0125				
Logik	0034	0083	0721	0060	0216	Multitec	0060	0579	0509	0691	1060
	0579	0394					0372	0032	0386	0509	0060
Logix	0691						0393	0579	0240	0239	0270
Luma	0060	0386	0229	0328	0186		0125	0287			
	0434	0579	0397	0032	0282	Murphy	0127	0239	0095	0186	
Lumatron	0386	0229	0328	0060	0579	Musikland	0060	0241	0270	0579	
	0186	0282	0384	0240	0287	Myryad	0579	0060			
	0096					NAD	0189	0201	0384	0186	
Lux May	0060	0032	0579	0604		Naiko	0060	0629	0579		
Luxman	0602					Nakimura	0397	0060	0579		
Luxor	0217	0313	0386	0503	0515	Naonis	0386	0186			
	0372	0384	0231	0379	0571	NAT	0249	0237			
	0186	0369	0496	0202	0240	National	0237	0249			
	0654					NEC	0193	0059	0343	0478	0032
LXI	0201						0397	0240	0060	0579	0034
Madison	0060	0579					0727	0522			
Magnadyne	0110	0270	0539	0125	0186	Neckermann	0060	0214	0393	1528	0528
Magnafon	0539	0125	0239	0096			1033	0223	0577	0579	0186
Magnavox	0060	0579	0059	0202			0350	0441	0372	0110	0270
Magnum	0671	0737	0060	0579	0738		0240	0434	0343	0386	0535
Mandor	0287					NEI	0060	0579	0360	0454	0394
Manesth	0060	0579	0258	0240	0287		0186				
	0343	0058	0317	0186	0386	Nesco	0270	0202			
Manhattan	0060	0579	0691	1060	0186	Netsat	0060	0579			
Marantz	0060	0579	0435			Network	0055	0360			
Marelli	0110					Neufunk	0060	0032	0579	0633	0241
Mark	0060	0579	0240	0239	0397		0305	0737			
	0032	0737	0738			New Tech	0060	0032	0579	0366	0240
Masuda	0241	0394	0032	0287	0060		0471				
	0240	0579				New World	0241				
Matsui	0060	0579	0510	0032	0258	Nicamagic	0239				
	0200	0034	0378	0095	0059	Nikkai	0095	0241	0060	0579	0240
	0240	0377	0317	0394	0456		0287	0055	0058	0360	0239
	0466	0386	0602	0478	0186		0032	0059			
	0295	0372	0539	0058	0454	Nikko	0201				
	0231	0068	0218	0214	0358	Nobliko	0125	0093	0239		
Matsushita	0273	0673				Nogamatic	0422	0132	0219		
Matsviama	0610										
McMichael	0066										
Mediator	0060	0579	0035								

Nokia	0384	0186	0503	0372	0571	Pilot	0579	0060	0735					
	0515	0382	0496	0362	0231	Pioneer	0189	0060	0579	0451	0393			
	0397	0654	0629	0369	0202		0366	0384	0132	0186	0310			
	0343	0590	0633	0132			0509	0535						
Nordic	0240					Pionier	0393	0509						
Nordmende	0132	0737	0310	0422	0219	Plantron	0060	0579	0287	0032				
	0366	0221	0583	0218	0060	Playsonic	0240	0737						
	0579	0358	0186	0494		Policom	0125	0132	0219	0221	0229			
Norfolk	0186						0261	0298	0384	0186	0093			
Normerel	0060	0579					0097	0107	0110	0558				
Novak	0035					Polytron	0720							
Novatronic	0060	0128	0397	0554	0579	Poppy	0032							
Nurnberg	0186	0384				Portland	0397	0647						
Oceanic	0590	0186	0423	0384	0317	Powerpoint	0510							
	0231	0586	0496	0571	0503	Prandoni-								
Odeon	0287					Prince	0270	0539	0384	0386				
Okano	0393	0060	0579	0287	0095	Precision	0240							
	0032					Premier	0032							
Omega	0287					Prima	0055	0032	0287	0326	0435			
Onwa	0394	0625	0241	0456	0604	Prinz	0095	0372	0384	0217				
	0125	0454				Profex	0032	0186	0454	0384	0386			
Opera	0060	0579				Profi	0032							
Optimus	0273	0673	0189	0149		Profitronic	0060	0579	0125					
Optonica	0116					Proline	0060	0579	0648	0657	0653			
Orbit	0060	0579					0434	0035	0344	0095				
Orion	0060	0202	0378	0579	0678	Prosonic	0060	0579	0393	0397	0394			
	0737	0258	0317	0200	0343		0691	0737	0239	0237	0602			
	0034	0032	0344	0387	0466	Protech	0060	0579	0240	0032	0270			
	0125	0287	0435	0539	0554		0372	0125	0287	0454	0441			
Orline	0060	0241	0579				0360	0691	0305	0186	0509			
Ormond	0408	0691	1060	0060	0579	Proton	0201							
Orsowe	0539					Provision	0522	0060	0579	1060				
Osaki	0095	0241	0055	0240	0287	Pye	0060	0579	0035	0110	0577			
	0516	0060	0435	0295	0397		0397	0372	0435					
	0378	0579				Pymi	0032							
Osio	0060	0579	0313			Quadra								
Oso	0241					Vision	0423							
Osume	0180	0095	0059	0055	0241	Quadral	0241							
	0060	0579				Quasar	0270	0673	0273	0032	0149			
Otto Versand	1528	0528	1033	0059	0116	Quelle	0060	1528	0528	1033	0034			
	0535	0060	0579	0558	0218		0132	0535	0558	0372	0577			
	0372	0577	0214	0384	0258		0214	0384	0055	0059	0240			
	0132	0317	0249	0270	0326		0270	0097	0350	0107	0351			
	0343	0240	0032	0305	0366		0093	0127	0128	0691	0579			
	0451	0454	0539	0542			0180	0218	0223	0287	0313			
Pacific	0060	0579	1160				0169	0317	0369	0444	0032			
Pael	0239					Questa	0059	0055						
Palladium	0393	0060	0214	1528	0528	R-Line	0060	0579	0186					
	1033	0223	0441	0577	0579	Radialva	0132	0241	0454	0186	0060			
	0270	0350	0372	0110	0186		0579	0310						
	0240	0434	0678	0542	0386	Radiola	0060	0579	0035	0240				
Palsonic	0287	0435	0060	0240	0400	Radiomarelli	0110	0539	0270	0060	0579			
	0241	0721	0579	0471		RadioShack	0060	0579	0055	0201				
Panama	0032	0240	0287	0239	0060	Radiotone	0032	0060	0579	0451	0393			
	0579	0270					0602	0441	0435	0671	0691			
Panasonic	0673	0273	0149	0249	0237		0287							
	0384	0390	0539	0060	0579	Rank	0093							
	0186	0571				Rank Arena	0059	0180						
Panavision	0060	0434	0579			RBM	0093							
Pathe						RCA	0648	0116	0583	0358	0366			
Cinema	0186	0261	0239	0423	0343		0776							
	0315	0372	0454	0393		Realistic	0055	0201						
Pathe						Recor	0060	0579						
Marconi	0132	0219	0221	0422		Rectiligne	0060	0579						
Pausa	0032					Rediffusion	0384	0571	0059	0369				
Perdio	0095	0343	0186	0060	0239	Redstar	0060	0579						
	0305	0579				Reflex	0060	0579	1060	0691				
Perfekt	0060	0579				Reoc	0737	0647	0657					
Pershin	0423					Revox	0060	0579	0393					
Phase	0055					Rex	0328	0229	0386	0434	0270			
Philco	0110	0107	0097	0441	0270		0186	0282	0287					
	0186	0393	0060	0168	0579	RFT	0110	0315	0393	0451	0095			
	0542						0287	0060	0579					
Philex	0216	0186				Rhapsody	0239							
Philharmonic	0240					Ricoh	0060	0579						
Philips	0579	0060	0261	0035	0577	Roadstar	0032	0441	0060	1060	0579			
	0214	0066	0110	0216	0366		0241	0287	0305					
	0397					Robotron	0110							
Phoenix	0060	0579	0393	0509	0186	Rodex	0060	0579						
	0110	0095	0239	0343	0408	Rowa	0287	0721	0240	0735				
Phonola	0060	0579	0035	0110	0216	Roxy	0471							
	0239					Royal Lux	0444	0393	0435	0358				

Rukopir	0579	0060			
Saba	0648	0310	0110	0422	0186
	0132	0539	0366	0384	0521
	0219	0221	0358	0571	0494
	0583				
Saccs	0261				
Sagem	0633	0478	0305		
Saisho	0258	0539	0200	0032	0034
	0240	0454	0186	0287	0377
Saivod	0060	0579			
Sakai	0186				
Salora	0313	0217	0372	0186	0379
	0382	0384	0387	0539	0386
	0571	0362	0231		
Salsa	0358				
Sambers	0539	0125			
Sampo	0055				
Samsung	0641	0610	0060	0201	0579
	0032	0240	0471	0393	0287
	0239	0313	0667	0083	0055
	0095	0231	0542	0186	
Sandra	0239	0240			
Sanela	0261				
Sansui	0060	0579	0729	0394	0678
	0749	0748	0625	0444	0478
Santon	0032				
Sanyo	0231	0180	0315	0059	0034
	0393	0362	0095	0239	0240
	0127	0068	0578	0169	0032
	0186	0060	0131	0579	0509
Save	0060	0579			
SBR	0060	0579	0035	0216	0066
Schaub					
Lorenz	0372	0571	0737	0629	0384
	0509	0397			
Schneider	1160	0060	0579	0542	0035
	0326	0372	0417	0282	0366
	0240	0270	0394	0384	0241
	0691	1060	0186	0671	0647
	0737				
Scotland	0186				
Scott	0201	0202			
Sears	0169	0194	0201	0202	
SEG	0060	0579	1060	0691	0240
	0510	0032	0372	0186	0287
	0657	0059	0125	0270	0239
	0241	0647			
SEI	0110	0125	1528	0528	1033
	0186	0539	0372	0317	0229
	0060	0579	0200		
Sei-Sinudyne	0125	0229	0317	0539	1528
	0528	1033	0060	0579	0110
Seleco	0328	0229	0386	0282	0186
	0434	0394	0059	0287	0369
Sencora	0032				
Sentra	0058	0241	0032	0372	
Serino	0633	0478	0239	0116	1116
Sharp	0116	1116	1216	0180	0059
	0317	0676	0076	0117	0279
	0216	0539	0223		
Shintoshi	0060	0579			
Shivaki	0060	0579	0466	0397	
Shorai	0317	0202			
Siarem	0186	0110	0125	0539	
Siemens	0214	0558	0577	0223	0218
	0350	0351	0180	0055	0169
	0060	0579	0384		
Siera	0060	0579	0035		
Siesta	0393				
Silva	0060	0579	0239	0384	0671
Silver	0059	0060	0478	0384	0579
	0202	0738	0186		
Singer	0032	0110	0060	0579	0125
	0270	0458	0423	0590	0358
	0186				
Sinudyne	0200	0110	0258	0125	0317
	0186	0384	0539	0372	1528
	0528	1033	0229	0060	0579
Skantic	0379				
Sky	0060	0579			
Skymaster	0128				
Skysonic	0719				

SLX	0691				
Smaragd	0510				
Sogera	0343				
Solavox	0055	0384	0095	0186	0571
	0060	0579			
Sonawa	0241				
Soniko	0060	0579			
Sonitron	0231	0393	0362	0240	
Sonneclair	0060	0579			
Sonoko	0060	0579	0032	0287	0305
	0240				
Sonolor	0231	0590	0186	0423	1528
	0528	1033	0571	0384	0305
Sontec	0060	0579	0393	0317	0032
Sony	1528	1674	1033	0528	0034
	0059	0125	0060	0579	
Sound & Vision	0125	0241	0397	0060	0579
Soundesign	0201	0202			
Soundwave	0060	0579	0343	0441	0055
Spectra	0032				
Ssangyong	0055	0032			
Stag	0055				
Staksonic	0032				
Standard	0060	0579	1060	0241	0032
	0240	0343	0397		
Starlite	0032	0186	0060	0579	0287
	0435				
Stenway	0305	0241			
Stern	0328	0229	0282	0186	0386
	0287	0434	0458		
Strato	0060	0579	0287	0032	
Stylandia	0240				
Sunic Line	0060	0579			
Sunkai	0317	0378	0344	0478	0241
	0258	0633	0060	0579	0510
	0554				
Sunstar	0394	0060	0579	0032	0602
	0287				
Sunwood	0060	0579	0032		
Superla	0539	0239	0240		
SuperTech	0032	0060	0579	0239	0241
Supra	0397	0032			
Susumu	0358	0241	0310		
Sutron	0032				
Swissline	0270				
Sydney	0239	0240			
Symphonic	0194				
Sysline	0060	0579			
Sytong	0239				
T+A	0470				
Tactus	0295				
Tandberg	0390	0434	0132	0360	0219
	0384	0186			
Tandy	0241	0095	0240	0270	0116
	0186				
Tashiko	0059	0066	0240	0169	0193
	0055	0239	0382	0186	0386
Tatung	0060	0579	0095	0539	0240
	0295	0034			
TCM	0737				
Teac	0721	0535	0060	1060	0579
	0735	0691	0478	0240	0729
	0287	0647	0201	0032	0194
	0435	0372	0305	0441	0454
TEC	0240	0032	0270	0494	0358
	0360	0282	0060	0579	0384
	0186				
Tech Line	0060	0579	0691		
Technica	0241				
Technema	0343				
Technics	0273				
TechniSat	0678	0060	0579	0186	
Technol Ace	0202				
Tecnimagen	0579				
Tedex	0240	0629	0032	0231	0610
	0060	0579	0454		
Teiron	0032				
Teknika	0083	0202			
Teleavia	0132	0310	0219	0422	0366
Telecor	0060	0186	0579	0241	0240
	0282	0417			

Telefunken	0132	0521	0494	0422	0310
	0097	0107	0124	0358	0285
	0096	0366	0219	0060	0579
	0509	0648			
Telefusions	0060	0579			
Telegazi	0060	0186	0579	0282	0241
	0287				
Telemeister	0343	0060	0579		
Telesonic	0060	0579			
Telestar	0060	0579	0602	0435	
Teletech	0060	0579	0691	0032	0270
	0360				
Teleton	0240	0298	0229	0186	0372
	0282	0059	0386		
Televideon	0343	0186	0239		
Television	0060	0579			
Televiso	0423				
Telexa	0125				
Temco	0317				
Tempest	0032	0060	0579		
Tennessee	0060	0579			
Tensai	0127	0241	0060	0579	0240
	0317	0343	0032	0128	0397
	0394	0400	0270	0738	0186
Tenson	0343	0032			
Tevion	0542	0060	0579	0671	0691
	1160				
Textet	0240	0397	0032	0239	0241
Thomson	0648	0583	0310	0132	0422
	0494	0358	0219	0221	0366
	0060	0579	0372		
Thorn	0216	0096	0213	0261	0215
	0097	0107	0522	0060	0127
	0579	0358	0535	0382	0295
	0397	0058	0131	0132	0248
	0366	0384	1528	0528	1033
	0558	0095			
Thorn-Ferguson	0127	0131	0132	0213	0215
	0261	0216	0384	0358	0522
	0096	0058			
TMK	0201	0200			
Tokai	0095	0060	0471	0579	0360
	0186	0691	0240	0397	0032
Tokyo	0239	0058	0471		
Tomashi	0305	0241			
Toshiba	0058	0083	0531	0266	0059
	0093	0125	1531	0240	0132
	0741	0218	0214	0641	
Towada	0372	0125	0240		
Toyoda	0032	0394			
Trakton	0287				
Trans					
Continens	0691	0240	0060	0579	
Transonic	0060	0579	0478	0610	0535
	0287	0721	0735		
Transtec	0239				
Triad	0060	0579			
Trical	0180				
Trident	0539	0240			
Tristar	0287	0241	0216		
Triumph	0200	0539	0369	0579	0060
	0266				
Tsoschi	0305				
TVTEXT 95	0579				
Uher	0060	0579	0229	0343	0326
	0397	0441	0509	0393	0282
Ultra	0215				
Ultravox	0110	0125	0397	0270	0239
	0186	0060	0579		
Unic Line	0060	0579	0496	0478	0372
United	0060	0579	0737	0738	
Universum	0369	0128	0558	0218	0496
	0384	0270	0515	0503	0393
	0223	0441	0034	0169	0535
	0317	0059	0180	0055	0093
	0186	0287	0127	0060	0579
	0444	0434	0313	0097	0350
	0351	1528	0528	1033	0691
	0372	0240	0132	0360	0200
	0654	0577	0032	0107	

Univox	0060	0579	0360	0110	0186
	0261				
Utax	0186				
Vestel	0060	0186	0240	0579	0691
	1060				
Vexa	0032	0060	0579		
Vibrant	0295				
Victor	0076				
Videologic	0241				
Videologique	0239	0241	0240		
Videosat	0270				
VideoSystem	0060	0579			
Videotechnic	0239	0343	0240	0397	
Videoton	0379	0186	0454		
Vidikron	0125				
Vidtech	0059	0201			
Viper	0360				
Visiola	0239				
Vision	0060	0579	0343	0240	
Vistar	0229	0384	0590		
Vortec	0060	0579			
Voxson	0110	0060	0579	0386	0441
	0186				
Waltham	0240	0691	0379	0441	0310
	0408	0060	0579	0132	0454
Wards	0202				
Watson	0060	0343	0579	0186	0241
	0328	0602	0542	0417	0032
	0691	1060			
Watt Radio	0125	0372	0186	0239	
Wega	0060	0579	0059	0110	
Wegavox	0032	0060	0579		
Weltblick	0060	0579	0343	0240	
Weston	0060	0579			
Wharfedale	0060	0542	0579		
White Westinghouse	0343	0239	0060	0579	0360
	0647				
Windsor	0691				
Windstar	0305	0360			
Windy Sam	0579				
Wintel	0737				
Xrypton	0060	0579			
Yamishi	0305	0478	0241	0060	0240
	0579				
Yokan	0060	0579			
Yoko	0240	0060	0579	0241	0287
	0032	0454	0444	0393	0328
	0362	0239	0270		
Yorx	0241				
Zanussi	0229	0328	0386	0240	
Zenith	0647				
Zenor	0362				

Video Recorders

Accuphase	0660				
Adelsound	0027				
Adyson	0095				
Aiwa	0330	0023	0371	0375	0060
	0710	0765	0064		
Akai	0129	0338	0064	0043	0375
	0263				
Akashi	0095				
Akiba	0095				
Akura	0095	0064			
Alba	0301	0095	0375	0043	0023
	0338	0371	0104	0316	
Allorgan	0263				
Allstar	0345	0104			
Ambassador	0043				
Amstrad	0023	0348	0301	0095	
Anitech	0095	0345			
Ansonic	0027	0023			
Aristona	0104				
ASA	0060	0104			
Asuka	0095	0060	0104	0023	0061
Audiosonic	0301				
Audioton	0043				
AVP	0375	0023			
AWA	0060	0301	0665	0098	0066

Baird	0129	0301	0127	0130	0064	Goodmans	0023	0095	0263	0301	0085
	0023						0060	0043	0366	0104	0371
Bang & Olufsen	0522						0426	0316	0660	0375	0665
Basic Line	0301	0043	0095			Graetz	0064	0127	0263		
Bestar	0301	0043				Granada	0127	0071	0104	0263	0060
Black Diamond	0665	0301					0249	0065	1085	1185	0023
Black Panther	0301						1285	1385			
Blaupunkt	1585	0249	0185	1085	1185	Grandin	0095	0060	0043	0023	0301
	1285	1385	0104	0250	0177	Grundig	0030	0218	0104	0370	0249
	0218	0426	0057				0426	0343	0371	0230	0316
Blue Sky	0060	0371	0095	0375	0301		0095	1085	1185	1285	1385
	0023					Haaz	0371				
Bondstec	0043	0095				Hanimex	0375				
Bosch	0177					Hanseatic	0060	0301	0104	0061	
Brandt	0064	0229	0343	0344	0516	Hantor	0043				
						Harwood	0095				
Brandt Electronic	0064					HCM	0095	0345	0316		
Brinkmann	0371					Hinari	0027	0095	0316	0375	0064
Bush	0095	0301	0338	0375	0316		0345	0366	0301	0263	
	0023	0371	0104			Hisawa	0375				
Carena	0104					Hischito	0068				
Carrefour	0068					Hitachi	0065	0189	0064	0023	0263
Casio	0023						0104	0027	0127	0426	0407
Cathay	0301					Hornophone	0104				
Catron	0043					Hypson	0095	0301	0375		
CGE	0064	0023				Impego	0043				
Cimline	0095					Imperial	0023	0263			
Clatronic	0043	0095	0023			Ingersoll	0027	0263			
Combitech	0375					Inno Hit	0043	0263	0301	0345	0095
Condor	0043	0301				Interbuy	0060	0095			
Crown	0301	0095	0043	0345		Interfunk	0104	0127			
Cyrus	0104					Internal	0301	0660			
Daewoo	0301	0665	0660	0371	0375	International	0301	0060			
	0068	0043				Intervision	0023	0301	0060	0371	
Dansai	0095	0301				Irradio	0095	0060	0104		
Daytron	0301					ITT	0129	0064	0407	0127	0263
de Graaf	0065	0189	0104	0127	0071	ITT Nokia	0071				
Decca	0023	0064	0104	0031	0090	ITV	0301	0060	0043		
	0371					JMB	0375				
Deitron	0301					Joyce	0023				
Denko	0095					JVC	0064	0090	0031	0229	0230
Diamant	0060						0407				
Dual	0064	0104	0301	0023		Kaisui	0095				
Dumont	0023	0104	0127			Karcher	0301				
Elbe	0301	0061				Kendo	0129	0338	0371	0095	0060
Elcatech	0095					Kenwood	0064	0061			
Elin	0263					KIC	0023				
Elsay	0095					Kimari	0070				
Elta	0095	0301				Kneissel	0375	0371	0060		
Emerson	0095	0068	0023			Kolster	0371				
ESC	0301	0263	0043			Korpel	0095				
Etzuko	0095					Kuba	0070				
Europhon	0043					Kuba Electronic	0070				
Fenner	0043					Kuwa	0249	1085	1185	1285	1385
Ferguson	0130	0064	0343	0344	0516	Kyoto	0095				
	0023	0301				Lenco	0301				
Fidelity	0023	0095	0348	0263		Leyco	0095				
Finlandia	0127	0104	0065	0189	0023	LG	0060	0023	0301		
	0071	0407	0030			Lifetec	0371				
Finlux	0023	0104	0127	0065		Loewe	0104	1585	1085	1185	1285
Firstline	0095	0371	0066	0060	0068		1385	0185	0249	0477	0060
	0065	0316	0301				0027				
Fisher	0070	0127	0061	0043		Logik	0027	0263	0095	0129	
Frontech	0043	0345	0095			Lumatron	0301				
Fujitsu	0023					Luxor	0129	0066	0095	0085	0127
Funai	0023						0070	0071			
Galaxi	0023					Magnavox	0104	0426			
Galaxis	0301					Manesth	0095	0068	0104		
GBC	0043					Marantz	0104	0061	0085	0169	
GE	0343					Mark	0301	0043			
GEC	0104					Marquant	0345				
General	0043					Matsui	0027	0371	0060	0263	0375
General Technic	0371						0023				
Genexxa	0127					Mediator	0104				
Goldhand	0095					Medion	0371	0375			
GoldStar	0060	0023				Meletronic	0023	0060	0061		
						Memorex	0127	0023	0060	0071	0070
						Memphis	0095				
						Metz	1585	0218	1085	0370	1185
							0104	1285	1385	0185	0249
							0477	0250	0060		

VideoPro	0043			
Watson	0104	0375	0301	0665
Weltblick	0060			
Wharfedale	0638			
Yamaha	0064			
Yamishi	0095	0301		
Yokan	0095			
Yoko	0060	0095	0043	0263
Zenith	0660			

Satellite Receivers

ABSat	0855	0691	0146	0733
ADB	0665			
Adcom	0223			
Aegir	0543			
AGS	0691	0733		
Akai	0538	0223		
Akena	0691			
Alba	0538	0478	0636	0736 0757
Aldes	0543	0757		
Allsat	0223	0757	1040	1066
Allsonic	0392			
Alltech	0736			
Alpha	0691	0223		
Altai	0419			
Amitronica	0736			
Ampere	0419	0155		
Amstrad	0368	0870	0266	0736 0765
	0419	0155	0905	0908 0886
	0524	0818	1136	
Anglo	0736			
Ankaro	0392	0736		
AntSat	1040	1106		
Antron	0636			
Apollo	0478			
Arcon	1228	1066	0857	0155 1098
Armstrong	0266	0223		
ASA	0420			
Asat	0223			
ASLF	0736			
AssCom	0876			
Astacom	0691	0733		
Aston	1152	0165		
Astra	0131	0266	0630	0736
Astrastar	0571			
Astro	0156	0196	0381	0543 0636
	0392	0524	0681	0571 0630
	1136	1122	1123	0223 0315
Athena	0691			
Atlanta	0894			
Audioton	0636			
Aurora	0902			
Austar	0886	0665	0520	0902 1199
	0903			
Avalon	0419			
Axiel	0691	0733		
Axis	1134	0392	0857	0903
Barcom	0131			
Beko	0478			
Bentley				
Walker	1040			
Best	0392			
Bestar	0266			
Blaupunkt	0196			
Blue Sky	0736	0908		
Boca	0155	0266	0817	0736
Boston	0155	0733	0691	0817
Broco	0736			
BskyB	0870	1198		
BT	0538	0691	0733	
Bubu Sat	0736			
Cambridge	0538	0524		
Canal				
Satellite	0876	0315		
Canal+	0876	0315		
Cherokee	0146	0733		
Chess	0180	0628	0736	1108
CityCom	1199	0138	0630	0322 0841

Claasen				
Nachrichten	0543			
Clark	0834	0636		
Clemens				
Kamphus	0857	0419		
CNT	0543			
Cobra	0419			
Colombia	0691	0155		
Columbia	0155	0817		
Columbus	0691			
Comag	0155			
Condor	0392	0630		
Connexions	0419	0392		
Conrad	0630	0596	0138	0392 0524
Conrad				
Electronic	0630	0736		
Crown	0266			
Cryptovision	0478	0818		
Cyrus	0223			
D-box	1150	1137	0746	0896
Daeryung	0419			
Daewoo	0736			
Daumling	0817			
Delfa	0886			
Deltasat	1098			
Digenius	0322	1184		
Digitality	0630			
Digipro	1128			
DigiQuest	0886			
Discoverer	0628	0180		
Discovery	0691	0733		
Diseqc	0733			
Distratel	0107	0908	1228	
Distrisat	0223			
DMT	1098			
DNT	0223	0419		
Dune	0392			
Dynasat	0702			
Echostar	0633	1192	0894	0190 0876
	1109	1223	0477	0419 0736
	0691	0534		
Einhell	0155	0266	0736	0524 0817
Elap	0736	1152	0610	0691 0733
Elekta	0543			
Elsat	0736			
Elta	0223	0392		
Emme Esse	0392	0702	0894	
Engel	1040	0736		
EP Sat	0478			
Eurieult	0107	0908	0905	0159
Eurocrypt	0478	0131		
Europa	0886	0630	0524	0223
European	0817			
Europhon	0322	0630		
Eurosat	0266			
Eurosky	0630	0155	0322	0138 0266
	0392	0137	0524	
Eurostar	1049	0630	0903	0702 0138
Exator	0538	0636		
Fenner	0691	0180	0628	0736 0392
Ferguson	0478	0734		
Fidelity	0524			
Finlandia	0478	0131		
Finlux	0131	0596	0478	0437 0420
Flair Mate	0736			
Force	1124			
Fortec Star	1040	1106		
Foxtel	0902	0743	0478	0520 0818
	1199	0368		
Fracarro	0894	0691		
FreeCom	0757	0524	0196	
Freesat	0905	0610		
FTEmaximal	0834	0392	0736	0886
Fuba	0392	0419	0196	0437 0596
	0131	0138	1184	0322
Fugionkyo	1128			
Galaxis	1134	1124	0857	0886 1199
	0876	0392	0138	0902
Gardiner	0841			
Garnet	1098			
GF	0857	1066		
GF Star	1066			

GMI	0266				
GOD Digital	0223				
Goldbox	0315	0876			
Goldvision	1040				
Gooding	0594				
Goodmans	0478				
Gradiente	0910				
Granada	0131	0478			
Grandin	0107	0159			
Grococ	0266				
Grundig	0196	0870	0594	0773	0368
	0902	0908	0876	0524	
Hanseatic	0628	1122	1123		
Hänsel & Gretel	0155	0630			
Hanuri	0543				
HDT	1034				
Heliocom	0630				
Helium	0630				
Hirschmann	0419	0905	1136	1134	0196
	0596	1108	0420	0322	0524
	0733	0630	0691	0392	0131
Hitachi	0478				
HNE	0765				
Houston	0691	0419			
Humax	1199	0886			
Hung Chang	0755				
Huth	0155	1166	0630	1040	0266
	0817	1098			
Hypson	0159				
Hyundai	1034	1098			
ID Digital	1199	0886			
Imex	0107	0159			
Ingelen	0419	0905			
International	0155	0266			
Interstar	1128	1040			
Intertronic	0266				
Intervision	0651	0630			
Invideo	0894				
IRTE	0632				
Italtel	0894				
ITT	0131				
ITT Nokia	0131	0596	0478	0420	0896
	0746				
JOK	0733				
JVC	0538	0594			
K-SAT	0736				
Kamm	0903	0736			
KaTelco	1134				
Kathrein	0681	0272	0381	0196	0223
	0636	0736	0691	0841	0765
	0146	0138	0733		
Kathrein Eurostar	0138				
Key West	0817				
Kiton	0137				
Klap	0691	0733			
Konig	0630				
Koscom	0857	1066			
KR	0636	0757			
Kreiling	0681	0272	0137		
Kreiselmeyer	0196				
Kyostar	0636	0155			
L&S Electronic	0392	1066			
LaSAT	0392	0543	0630	0266	0138
	0155	0180	0322		
Lenco	0736	0138	0392	0630	
Lenson	0524				
Lexus	0223				
Leyco	0538				
LG	1098				
Lifesat	0628	1145	0392	0322	1066
	0736				
Lifetec	0610				
Loewe	0266				
Logix	1040	1098			
Lorenzen	0322	1184	0817	0630	0765
	0155				
Lupus	0392				
Luxor	0131	0368	0596	0896	0524
M&B1	0628				
Manata	0733	0691	0159	0736	
Manhattan	1106	0478	0543	0733	0691
	0857	1040			
Marantz	0223				
Mascom	0834				
Maspro	0773	0736	0196	0594	
Matsui	0594	0733	0196		
Max	0630				
MB	0628				
Mediabox	0315	0876			
Mediacom	1229				
Mediamarkt	0266				
MediaSat	0524	0315	0876		
Medion	0736	0322	1066	0392	
Medison	0736				
Mega	0223				
Meletronic	0841				
Metronic	0736	0266	0636	0543	0107
	0159	0841	0908	1228	
Metz	0196				
Micro	0630	0636	0524	0736	
Micro electronic	0736				
Micro Technology	0736				
Micromaxx	0322	0392			
Microtec	0736				
Minerva	0594				
Mitsubishi	0478				
Morgan's	0266	0223	0817	0736	0155
Motorola	0879				
Multichoice	0665	0902			
Multitec	0180				
Myryad	0223				
Mysat	0736				
Neuhaus	0524	0736	0857	0630	
Neusat	0736	0857	0610		
NextWave	1166	0755			
Nikko	0266	0736	0746	0757	0223
Nokia	1046	1137	0774	1150	0746
	0896	0876	0596	0131	1246
	0478	0420			
Nordmende	0478	0543			
Nova	0902				
Octagon	0636				
Okano	0266	0691			
OnDigital	0774	0352	0264	0890	0156
Optex	0857				
Optus	0902	0315	0876	1166	
Orbit	1045				
Orbitech	1122	1123	0223	0315	0524
	0571	0180			
Origo	0520				
OSAT	0368				
Ouralis	1228				
Oxford	0538	0691			
Pace	0478	0870	0910	1198	0264
	0890	0146	0818	0743	0520
	0223	0876	0733		
Packsat	0733				
Palcom	0322	1184			
Palladium	0266	0594	0524		
Palsat	0524				
Panasat	0902	0638			
Panasonic	0870	0478			
Panda	0478	0131	0630	0196	0857
Patriot	0538	0691			
Philips	0223	1137	0315	0876	0478
	0773	0733	0636	0691	0594
	0196	0156	0841		
Phonotrend	0886	1040	1223		
Pioneer	0352	0876	0315	0375	
Planet	0894	0419			
Polytron	0419				
Praxis	1146	0534			
Preisner	0155	0266	0419	0817	1124
	1136				
Premier	0834	0315			
Premiere	0876	1137	1150	0746	0896
	1134	1199	1218	1123	0272
	0681				
Primacom	1134				

Pro Visat	0757	0543			
Profile	0691	0733			
Promax	0478				
Prosat	0651				
Prosonic	0765				
Provision	0543				
Pye	0594				
Pyxis	0857				
Quadral	0392	0651	0691	0733	
Quelle	0630	0765	0138		
Radiola	0223				
Radix	0419	1136	0905		
Rainbow	0636				
Red Star	0392				
RFT	0223				
Roadstar	0736				
Rover	0651	0736			
Saba	0543	0757	0733	0908	0138
	0630				
Sabre	0478				
Sagem	0843	1137			
Salora	0131				
Samsung	0886	0876	1229	1040	
SAT	0524				
Sat Partner	0543	0636	0757	0834	0524
Sat Team	0736				
Satcom	0628	0630			
Satec	0736	0857			
Satelco	0392				
Satline	0651				
Satstation	1106				
Schäcke	0636				
Schneider	0733	0691	0180	1229	
Schwaiger	0628	0755	0180	0630	0908
	1134	0155	0610	1098	
SCS	0138	0322			
Seemann	0419	0266	0538		
SEG	0392	0628	0765	0137	
Seleco	0894				
Septimo	1228	0908			
Servi Sat	0159				
Siemens	0196				
Skantin	0736				
Skinsat	0524				
SKR	0736				
Sky	0870	0879	0910	1037	0734
SKY+	1198				
Skymaster	0736	0628	0180	1223	1108
	1098	0610	0903	0651	
Skymax	0223				
SkySat	0180	0628	0736		
SL	0155	0765	0266		
SM Electronic	0180	0736	1223	1098	1108
	0610				
Smart	0155	0322	1124	0905	0419
	1136	0138	0736	0817	
Sony	0870	0876	0478	0315	
SR	0155				
Starland	0736	1145			
Strong	0636	0392	0543	0902	0895
	0876	1128	1170		
STVI	0159				
Sumida	0266				
Sunny Sound	0392				
Sunsat	0736				
Sunstar	0266	0392	0817	0155	
Super Sat	0702				
Supermax	1166				
Tantec	0478				
Tatung	0478				
Tecatel	1223				
TechniSat	0223	0315	1122	1123	1218
	1220	0524	0571		
Technosat	1166	1229			
Technowelt	0630	0908			
Techsan	1040				
Techwood	0137				
Teco	0266				
Telasat	0628	0138	0630		
Teleciel	0636	0757	1066		
Telecom	0736				
Telefunken	0733				

Teleka	0266	0636	0419	0773	0524
	0630	0857			
Telemaster	0543				
Telesat	0628	0630			
Telestar	0524	1122	1123	0137	0223
	0180	0315			
Teleste	0437				
Teletech	0903	0137			
Televés	0478	0524	0757	0155	
Tempo	1166				
Thomson	0478	0734	0736	0315	0876
	0138	0630	0843	0691	0733
	1069				
Thorn	0478				
Tioko	0266				
Tokai	0223				
Tonna	0478	0691	0524	0736	0857
Topfield	1229				
Toshiba	0478				
TPS	0843				
Triasat	0437	0524			
Triax	0437	0524	0138	0223	0419
	0736	0876	0137	0155	
Turnsat	0736				
Twiner	0155	0159	0736		
UEC	0902				
Uher	0180				
Unisat	0266	0223			
Universum	0196	0594	0420	0630	0322
	0138	0765			
Van Hunen	1184	0322			
Variosat	0196				
Vega	0392				
Ventana	0223				
Vestel	0765				
VH-Sat	1184	0322			
Visionic	1128				
Visiosat	0733	0736	0165		
VTech	0841				
Wetekom	0180	0628	0524		
Wewa	0478				
Wibo	0266				
Wisi	0196	0661	0419	0322	0478
	0524	0630	0857		
Woorisat	0543				
Worldsat	0733	0137	0146	0691	
XCOM	0855	0146	0691		
Xrypton	0392				
XSat	0855	0691	0736	0146	
YES	0910				
Zehnder	1098	0765	0137	0138	0841
	0543	0392			
Zenith	0879				
Zeta					
Technology	0223				
Zinwell	1199				
Zodiac	0636				
Zwergnase	0817	0266			

Cable Converters

Alcatel	0919	0920			
Austar	0035	0299			
BT	0026				
Cabletime	0294	0688			
Canal Plus	0466				
Comcrypt	0466				
Cryptovision	0623				
Decsat	0446				
Filmnet	0466				
France					
Telecom	0474	0840	0919	0920	
Galaxi	0031				
General					
Instruments	0299				
Golden					
Channel	1133				
HyperVision	0642				
Jerrold	0026	0299			
Kabelvision	0026				
Luxor	0704				

Macab 0840
 Melita 0026
 MNet 0466 0042
 Mr Zap 1135
 Mr Zapp 0840
 Nokia 0704
 Noos 0840
 NTL Cabletell 0299
 Oak 0042
 Ono 1091
 Optus 0299 1083
 Pace 1091 1083
 Philips 0642 0474 0840 0309
 PVP Stereo
 Visual 0026
 Sagem 0840 1112
 Salora 0405 0704
 Scientific
 Atlanta 0031 0300
 Tele+1 0466
 Teledanmark 0642 1039
 Telepiu 0466
 Thomson 1133
 Tudi 0309 0642
 United Cable 0026
 Videotron 0273
 Videoway 0273
 Visiopass 0474 0840

DVD Players

3DLAB 0562
 A-Trend 0737
 Acoustic
 Solutions 0753
 AEG 0811 0793
 Afrey 0721
 Aiwa 0664 0718
 Akai 0813 0802 0811 0789 0713
 0739 0736 0728
 AKI 0741
 Akira 0722
 Alba 0740 0722 0736 0746 0718
 All-Tel 0813
 Amitech 0793
 Amstrad 0736
 Ansonic 0797 0782
 Apex Digital 0695
 Audiosonic 0713
 AWA 0753
 Blac
 Diamond 0789 0736
 Blaupunkt 0740
 Blue Sky 0722 0718 0736 0695
 Boman 0806
 Brain Wave 0793
 Brandt 0674
 Bush 0722 0713 0712 0740 0736
 0797 0718 0746
 C-Tech 0791
 Cambridge
 Audio 0719
 Cambridge
 Soundworks 0719
 CAT 0722 0809
 Celestial 0695
 Centrex 0695
 Centrum 0736
 cineULTRA 0722
 Classic 0753
 Clatronic 0811 0802
 Clayton 0736
 Coby 0753
 Conia 0695
 Crown 0793 0674 0713
 Cybercom 0797
 CyberHome 0737
 Cytron 0739 0674 0728
 Daewoo 0793 0728 0737
 Daewoo
 International 0722

Dalton 0809
 Dansai 0793 0806
 Dantax 0746
 DEC 0722
 Decca 0793
 Denon 0513
 Denver 0722 0811
 Denzel 0688
 Diamond 0674 0791 0746
 Digihome 0736
 digiRED 0740
 Digitrex 0695
 DiK 0797
 Dinamic 0811
 DiViDo 0728
 DK digital 0797
 DMTECH 0806 0813
 Dragon 0797
 Dual 0688 0674 0736 0753 0806
 0802 0813 0797
 E-Boda 0746
 Eclipse 0746
 Electrohome 0793
 Elin 0793
 Elta 0713 0793 0811 0813
 Eltax 0789
 Emerson 0614 0728
 Encore 0721
 Enzer 0688
 Ferguson 0674
 Finlux 0764 0793 0806
 Funai 0718
 GE 0740
 Global
 Solutions 0791
 Global
 Sphere 0791
 Go Video 0806
 GoldStar 0614 0764
 Goodmans 0674 0813 0713 0806 0746
 Graetz 0688
 Grandin 0739
 Grundig 0562 0718 0674 0798 0728
 0813 0736 0746
 Grunkel 0793
 H&B 0736
 Haaz 0791
 Hanseatic 0764
 Harman/
 Kardon 0725
 HCM 0811
 HDT 0728
 HE 0753
 Henß 0736
 Hitachi 0687 0688 0596 0802
 Hiteker 0695
 Home
 Electronics 0753
 Hyundai 0806
 Ingelen 0811
 ISP 0718
 JBL 0725
 Jeken 0722
 JMB 0718
 JVC 0646 0581 0562 0526
 Karcher 0806
 Kendo 0722
 Kenwood 0557 0513 0760
 Kiiro 0741 0793
 Kiss 0688
 Koss 0674
 Lawson 0728 0739 0791
 Lecson 0719
 Lenco 0722 0797 0674 0793
 Lenoxx 0713
 Lexia 0722
 LG 0614 0764
 Lifetec 0674 0797
 Limit 0739 0791
 Loewe 0562
 LogicLab 0791
 Logix 0728 0806

Lumatron	0728				
Luxman	0596				
Magnavox	0526				
Magnex	0746				
Manhattan	0728				
Marantz	0562				
Mark	0736				
Matsui	0674	0718			
MBO	0713	0753			
MDS	0722				
Medion	0674	0797	0806	0739	0781
Memorex	0797				
Metz	0594	0548	0736		
MiCO	0746				
Microboss	0741				
Micromaxx	0718				
Micromedia	0526	0562			
Micromega	0562				
Microstar	0797				
Minax	0736				
Minoka	0793				
Mitsubishi	0736				
Monyka	0688				
Mustek	0753				
Mx Onda	0674	0746			
NAD	0764	0715			
Naiko	0793				
NEC	0715				
Neufunk	0688				
Nordmende	0797				
Omni	0721	0713	0722		
Onkyo	0526				
Optimus	0594	0548			
Orion	0718				
Oritron	0674				
Pacific	0791	0813	0782	0797	0736
Palladium	0718	0802			
Palsonic	0712	0695			
Panasonic	0513	0726			
Panda	0806				
Philips	0562	0669	0526		
Phonotrend	0722				
Pioneer	0594	0548			
Pointer	0793				
Powerpoint	0741				
Prima	0789				
Prima					
Electronic	0789				
Proline	0674	0695	0813		
Prosonic	0722				
Provision	0722				
Radionette	0764				
Raite	0688				
Rank Arena	0741				
RCA	0674				
REC	0712	0789	0513		
Red Star	0782	0771	0786	0793	0811
Reoc	0791				
Revoy	0722				
Roadstar	0722	0713	0712	0736	
Rotel	0646	0581			
Rowa	0782				
Saba	0674				
Sabaki	0791				
Saivod	0782				
Salora	0764				
Sampo	0721				
Samsung	0596	0513			
Sansui	0718	0739	0791	0746	0793
Sanyo	0718	0813			
Scan	0728				
ScanMagic	0753				
Schaub					
Lorenz	0811	0793			
Schneider	0674	0806	0802	0728	0813
	0811				
Scientific					
Labs	0791				
Scott	0741	0674	0695		
SEG	0688	0736	0791		
Shanghai	0695				
Sharp	0653	0718			
Sherwood	0740	0764			
Shinco	0740				
Silva	0811				
Silva					
Schneider	0797				
Singer	0713	0739	0746		
Skymaster	0753	0791			
Skyworth	0789				
Slim Art	0793				
SM					
Electronic	0753	0791	0713		
Smart	0741	0728	0736		
Sonashi	0739				
Sony	0556	0795	0596		
Soundmaster	0791				
Soundmax	0791				
Soundwave	0806				
Standard	0674	0791			
Sunwood	0811				
Supervision	0753	0791			
SVA	0695				
Synn	0791				
Tandberg	0736				
Tatung	0793				
Teac	0740	0764	0594	0715	0614
	0791	0781	0782	0813	
Technics	0513	0726			
Technika	0793				
Techwood	0736				
Tensai	0713	0674			
Tevion	0674	0791			
Theta Digital	0594				
Thomson	0574				
Tokai	0688	0721	0811		
Tokaido	0721				
Tokiwa	0728	0739			
Toshiba	0526	0781			
Umax	0713				
United	0811	0753	0813		
Universum	0764	0736	0614	0802	
Venturer	0813				
Vieta	0728				
Voxson	0797	0753			
Walkvision	0740				
Welkin	0797				
Wesder	0722				
Wharfedale	0719	0721	0746		
Windy Sam	0596				
XLogic	0793	0791			
XMS	0811	0712			
Yamaha	0513	0562	0669		
Yamakawa	0688	0733	0788		
Yelo	0741				
Yukai	0753				
Zenith	0526	0614	0764		

Guarantee

Crest Electronics warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal use for a period of one (1) year from the date of the original purchase. Product will be replaced free of charge if it has been proven to be defective within the one (1) year period when said product is returned at customer expense within the warranty period. THIS WARRANTY DOES NOT COVER ANY EXPENSES INCURRED IN THE REMOVAL AND REINSTALLATION OF THIS PRODUCT.

This warranty does not cover damage or failures caused by products or services not supplied by CREST ELECTRONICS, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, fire, water, lightning or other acts of God. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets, or any other items used in connection with the product.

There are no express warranties except as listed above. CREST ELECTRONICS SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some countries do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from country to country.

To obtain warranty service during the warranty period, please carefully pack the product and send it prepaid and adequately insured to the address below, together with your purchase receipt or other proof of the date of original purchase.

In Australia:

Crest Electronics
Importers & National Distributors
7 Prosperity Place
P.O. Box 184
Geebung - Brisbane
4034 Queensland

IMPORTANT:

IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD, YOU MUST INCLUDE YOUR PURCHASE RECEIPT so that we may establish your eligibility for service and can replace your unit without cost. It would be helpful if you included a note detailing the problem. **IF THE UNIT IS RETURNED FOR SERVICE OUTSIDE THE WARRANTY PERIOD**, please include a cheque to cover the cost of replacement, handling and return postage. (Prices may differ per model.)

NOTHING IN THIS GUARANTEE AFFECTS YOUR STATUTORY RIGHTS.

Copyright 2003 by CREST ELECTRONICS All rights are reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language or computer language, in any form or by any means, electronic, mechanical, or otherwise, without the prior written permission of CREST ELECTRONICS.

702826



URC-4140

HdH-1110903