

CREST

UNIVERSAL

Remote Control



USER MANUAL

RCP8

TABLE OF CONTENTS

INTRODUCTION	2
FEATURES AND FUNCTIONS.....	3
DEVICE PROGRAMMING	4
CODE SEARCH	5
PROGRAMMING A SECOND TV.....	5
ACTIVATING VOLUME LOCK	6
DE-ACTIVATING VOLUME LOCK	6
LEARNING	6
DELETING A LEARNED KEY	7
DELETING ALL LEARNED KEYS FROM DEVICE	7
ACTIVATE AND DE-ACTIVATE BACKLIGHT.....	7
SETTING UP THE HOME THEATRE MODE.....	8
TROUBLE SHOOTING	9
CUSTOMER SERVICE	9
SETUP CODES	10
TELEVISIONS	10
SATELLITE, CABLE & TOP-BOX CODES.....	14
VCR CODES.....	16
DVD CODES.....	17
AUDIO CODES.....	18
CD CODES	19
30-DAY LIMITED DYMBG	20
WARRANTY	22

INTRODUCTION

The RCP8 Universal Remote Control by CREST Electronics with Dynamic Database Technology™ is the latest generation universal remote designed specifically for the Australian market place.

Consolidating your remote controls has never been easier. With the RCP8's preprogrammed library of codes for TV's, VCR's DVD, Satellite converters, Audio and learning, consolidation is only steps away. Please read the enclosed instructions carefully and retain for future use.

INSTALLING BATTERIES

1. Pull back the remote controls battery cover and remove it
2. Insert two (2) new "AAA" batteries according to the + and -marks in the battery case
3. Push the battery cover back into place
4. Test the unit by pressing the Power key. If the batteries are inserted properly LED will light

NOTE: When the batteries need to be replaced, the remote control will stop working. Replace the old batteries and the unit will be restored to its full functionality

FEATURES AND FUNCTIONS



Use the POWER key to turn on or off the selected device.



 
Use the Device Select left and right keys to change the device being controlled.



Press the 16:9 key to change the aspect ratio/picture format on your TV (Not available on all TV's)



Press the SLEEP key to activate the sleep timer of your TV. (Not available on all TV's)

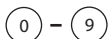

The digit keys are used to program the remote control and operate identically as your remote controls



 
Use the AV key to change the Video input on your TV



Use the -/-- to switch between one and two digit channel entry



Press the MUTE key to turn on or off the sound of the selected device

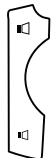

Use VOL + (or VOL-) keys to raise or lower the sound of the selected device



Press the Return key to switch between two programs



Use the CH + (or CH-) keys to the select the next higher or lower channel



Use the CURSOR keys to navigate and select items in the on screen menu or guide

FEATURES AND FUNCTIONS



Use the MENU key to access the on screen menu or guide of your TV, VCR, DVD or Satellite



 
The Red, Green, Blue and Yellow Keys allow you to access the Fast-Text functions of your TV as well as additional functions of your Satellite (Fast-Text is not available on all TV's)



The Teletext keys are used to access the teletext features on your TV (Teletext is not available on all TV's, please consult the owners manual of your TV for complete operation)



The PLAY, STOP, REWIND, FAST FWD, REWIND and RECORD keys operate identically as your original DVD or VCR remote control

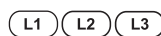

The L1, L2 and L3 keys are Dedicated learning keys (see Page 6)

DEVICE PROGRAMMING

The Crest RCP5 Universal Remote Control come pre-programmed with the most popular TV, VCR, DVD, Satellite and Audio codes used in Australia.

1. Turn on the Device to be programmed
2. Use the Device Select Left or Device Select Right keys to select the device you want to program.
3. Press and hold SETUP key for 3 sec until LED flashes twice and release SETUP key
4. Enter 4 Digit Number as per the information shown in Brand list
5. If the Setup is OK, the LED will flash 2 times.
6. Aim the remote at the device and press Power, if the device turns off you have found the correct code. If the device does not respond, repeat steps 3 through 5 using the next code listed for your brand.

CODE SEARCH

If the device you are trying to program does not work with the codes listed or if your brand is not listed try code search

1. Turn On the target Device
2. Use the Device Select Left or Right keys to select the device you want to learn the new function.
3. Press and hold SETUP key until LED flashes 2 times to and release SETUP key.
4. Press the MUTE and OK key at the same time, the LED will flash 2 times and remain ON to indicate the SEARCH mode is ready
5. Aim the Remote control at the device and press the Cursor Up key. If the device turns off, immediately stop and move on to step 6.

If the device does not respond, continue pressing and releasing the Cursor Up key until the device turns off

6. Press and release the OK key to store and save the code

-If you cannot control the device properly, you might have found the incorrect code and will need to continue searching until you find the code that works properly.

PROGRAMMING A SECOND TV

With the new Crest RCP8 universal remote control, you can program any device type under any device position. This remote control utilize a device identifier to determine what type of device you are programming. The device type identifiers are as follows:

0= TV	1= SATELLITE or TOP-BOX
2=DVD	3=VCR
4=AUDIO	5=CD

For example, to program a second TV under the SAT device position follow these instructions:

1. Turn on the TV to be programmed
2. Use the Device Select Left or Right keys to select SAT
3. Press and hold SETUP key until LED flash 2 times and release SETUP key
4. Enter 4 Digit Number as per the information shown in Brand list
5. If the Setup is OK, the LED will flash 2 times.
6. Aim the remote at the device and press Power, if the Device turns off you have found the correct code. If the device does not respond, repeat steps 3 through 6

ACTIVATING VOLUME LOCK

Volume lock will allow you to select the source in which you want to control the volume. For example, if you always use the TV to control the volume, you can configure the RCP8 so that regardless what device mode is selected (e.g. VCR, DVD or SAT), when you press the volume +/- or Mute keys you will always have control of the TV's volume. To activate volume lock, use the following instructions:

1. Press and hold the SETUP key until LED flashes twice and release SETUP key
2. Press the desired Device Type number (0: TV, 1: SAT/CAB, 2: DVD , 3: VCR, 4: AUDIO, 5: CD or 7: AV2).
3. Press Vol up key, The LED will flash twice

DE-ACTIVATING VOLUME LOCK

1. Press and hold SETUP key until LED flashes twice and release the SETUP key
2. Press SETUP and Mute at the same time, the LED will flash twice

LEARNING

The RCP8 includes a powerful learning feature to allow optimal customization of your new universal remote control. This feature will allow you to add unique functions from your original remote control onto the RCP8 for the complete solution in controlling all of your audio video devices.

1. Use the Device Select Left or Right keys to select the device you want to learn the new function
2. Press and Hold in the SETUP and MENU keys together until the LED under the selected device starts flashing.
3. Press the desired key (e.g. L1, L2 or L3 or any other key) until LED stays lit
4. Point the original remote to the front part of the RCP8, Press the desired key to learn on the original remote control.
5. When Capture of the code is successful, LED will show a SLOW flashing , after that it will indicate the normal flashing cycle of Learning mode

LEARNING CONT...

6. Repeat the above procedure until all the desired code has been learned.
7. To exit the learning mode, press and hold the SETUP and MENU keys and release.
8. To Learn keys into under a different device mode, repeat steps 1 through 7 substituting the new device in step 1.

-The RCP8 can store over 60 learned keys in its memory

-Learned keys can only be transmitted from the mode in which they were learned

-Due to the varying frequencies used to control devices, it is possible that some commands cannot be learned properly.

DELETING A LEARNED KEY

1. Use the Device Select Left or Right keys to select the device you want to learn the new function.
2. Press and Hold in the SETUP and MENU keys together until the LED under the selected device starts flashing.
3. Press and hold down the device select left key and the key to be deleted until the led flashes twice and release both keys.
4. Repeat step 3 to continue deleting keys.
5. Press and release SETUP + MENU to exit.

DELETING ALL LEARNED KEYS FROM DEVICE

1. Use the Device Select Left or Right keys to select the device you want to learn the new function.
2. Press and Hold in the SETUP and MENU keys together until the LED under the selected device starts flashing.
3. Press and hold down the device select left key and the device select right key until the led flashes three times and release both keys

ACTIVATING/DE-ACTIVATING BACKLIGHTING

With the RCP8, you can easily activate and deactivate the backlight feature with the following sequence:

DEACTIVATE BACKLIGHTING

1. Press and hold in RED + BLUE until backligt turns off.

ACTIVATE BACKLIGHTING

1. Press and hold in RED + BLUE until backlight turns on.

HOME THEATRE CONTROL

With the RCP8, you have the ability to setup a home theatre mode to easily control the most used features of your home theatre devices. The functions controlled are broken up into four groups as follows:

KEY GROUP	KEYS ASSOCIATED
Channel Control	Digits 0-9, -/-, Power, CH+/-, SLEEP, AV, 16:9
Volume Control	Volume +/-, Mute
Menu Navigation	Menu, OK, Up, Down, Left, Right, R, G, Y, B
Transport Control	Fast Fwd, Rewind, Play, Stop, Pause, Record

For Example, if you want the Channel Control to be set to the SAT mode, Volume to the AV1 mode, Menu to SAT mode and transport operation to the DVD mode follow these instructions:

1. Press the Device Select left or right key to select the HT mode.
2. Press and hold in the SETUP key until the LED flashes 2 times and release the SETUP key.
3. Press and release the OK key and the LED under HT will flash
4. Press the Device Select left or right key until the LED under SAT and HT are flashing.
5. Press and release the CH+ keys to select Channel Control Group for SAT mode.
6. Press and release the Cursor Up Key to select the Menu Navigation Group for SAT mode.
7. Press the Device Select left or right key until the LED under AV1 and HT are flashing.
8. Press and release the Volume + key to select the Volume Group for AV1.
9. Press the Device Select left or right key until the LED under DVD and HT are flashing.
10. Press and release the Play key to select the Transport Group for DVD.
11. Press and release the OK key to save your setting.

Note: Now when you select the HT mode, the groups of keys will operate the device you associated them with in the above steps.

TROUBLE SHOOTING

PROBLEM: The Red LED does not blink when you press a key.

SOLUTION: Replace the batteries with two (2) new AAA batteries.

TROUBLE SHOOTING CONT...

PROBLEM: The LED blinks when you press a key, but the device does not respond.

SOLUTION: Make sure the remote control is aimed at the device you are trying to operate

PROBLEM: The remote control does not control the device selected or the commands are not working properly.

SOLUTION: Try all listed codes for the device being set up. Make sure they can be operated with an infrared remote control

CUSTOMER SERVICE

If you have any questions about the operation of your new RCP8 Universal Remote Control, you may call our Customer Service for assistance. Before calling please read this manual carefully to find an answer to your question. If you cannot find a solution in this manual, please complete the information below on all your equipment before calling:

Date of purchase / /

 Day / Month / Year

A list of your equipment/models: (see example below)

Type	Brand	Model No.	Remote Model No.	RCP8 Code
TV	Saba	TCW 301	MB 100	0648 (ex)

Type/model numbers can often be found in your equipment owner's manual or on the factory plate behind the device.

In Australia: 1 800 812 261

Opening hours: 8.00 am - 5.00 pm (Mon-Fri.)

For WEB Support:

www.crestonline.biz

SETUP CODES

TELEVISIONS

Acec	0123
Acer	0034
Aea	0057
Aiko	0082, 0095
AKAI	0001, 0056, 0057, 0059, 0082, 0093, 0095, 0097, 0105, 0126
Akura	0083
Alaron	0084
Alba	0082, 0100, 0111
Amplivision	0100
Amstrad	0082, 0083
Ansonic	0100, 0123
ASA	0104
Astra	0057
ATD	0056
Audiosonic	0100
Audioton	0100
Audioworld	0056
AWA	0002, 0056, 0057, 0071, 0083, 0111
Baird	0090, 0095
Base	0036, 0038
Baseline	0057
Baur	0061, 0101, 0102, 0125
Beko	0057, 0100
Best	0100
Bestar	0100
Blaupunkt	0101, 0102
Bush	0057, 0082, 0111
Carrefour	0104, 0111
Celestial	0003, 0004, 0058
Centrex	0056
CGE	0100
Clarivox	0104
Clatronic	0082, 0100
Condor	0100
Conia	0039
Contec	0111
Crown	0100, 0106
Daewoo	0057
Daenyk	0084
Dansette	0083
Dantax	0100

TELEVISIONS CONT....

De Graaf	0105
Decca	0056, 0095
Deitron	0057
Diamond	0056
Digital Life	0074
Digitor	0056, 0057
Dual	0090
Dumont	0095, 0104
Dux	0123
Elbe	0100
Elin	0105
Emerson	0082, 0084, 0104
Erres	0123
Euroman	0100
Fidelity	0082
Finlandia	0105
Finlux	0084, 0095, 0104
Firstline	0095
Fisher	0095, 0100, 0111
Fujitsu	0084, 0095
Funai	0084
Galaxis	0100
GE	0090
GEC	0095
Genexxa	0083
Goldstar	0097, 0100
Goodmans	0082, 0084, 0090, 0095, 0111, 0126
Gorenje	0100
Gradiente	0106
Graetz	0082
Granada	0095, 0099, 0111, 0123
Grundig	0101, 0102, 0104, 0126
Haier	0010, 0056
Hanseatic	0100
Harwood	0083
HCM	0083
Hinari	0084, 0111
Hitachi	0046, 0090, 0095, 0099, 0105, 0111, 0126
Hornyphone	0123
Hyundai	0056
ICE	0082
Imperial	0100
Inno Hit	0095

TELEVISIONS CONT...

Interfunk	0100, 0123, 0125
Intervision	0082, 0097, 0100
ITS	0084, 0082
ITT	0084, 0105
ITT Nokia	0105
Jean	0111
JVC	0065, 0082, 0106, 0107, 0111
Karcher	0100
Kendo	0097, 0100
Konka	0058, 0082
Korting	0100
Kotron	0083
Kross	0041
Kyoshu	0083
Leyco	0095
LG	0014, 0097, 0100
Liesenkotter	0123
Lifetec	0125
Loewe	0100, 0125
Logik	0082
Luxor	0084, 0105
Magnavox	0018, 0084, 0111
Masuda	0082
Matsui	0082, 0095, 0101, 0111, 0126
M-Electronic	0090, 0125
Memorex	0045
Memphis	0095
Metz	0101, 0102
Minerva	0101, 0102, 0104
Minoka	0083
Mistubishi	0099, 0111, 0125
Mivar	0100
MTC	0100, 0125
Multitech	0100
Murphy	0095
NEC	0019, 0057, 0060, 0076, 0111
Neckerman	0061, 0100, 0102, 0126
NEI	0082
Neufunk	0126
New Tech	0090, 0126
Nikkai	0095, 0111
Nobliko	0104

TELEVISIONS CONT...

Nokia	0105
Normende	0090, 0101
Okano	0095, 0100
Omni	0074
Onwa	0082
Optimus	0045
Orion	0083, 0084, 0126
Osaki	0083, 0095
Osume	0095, 0111
Otto Versand	0061, 0101, 0102, 0111, 0125, 0126
Palladium	0061, 0100, 0102, 0126
Palsonic	0083, 0097
Panasonic	0043, 0045, 0105, 0109
Perdio	0095
Philco	0100
Philips	0090, 0102, 0123, 0126
Pioneer	0090, 0100
Prinz	0095
Proline	0095, 0123
Prosonic	0082, 0100
Pye	0123, 0126
Quasar	0045
Quelle	0101, 0102, 0104, 0111, 0125
Radiola	0123, 0126
Radiotone	0083, 0100
Rediffusion	0105, 0111
Revox	0100
RFT	0095, 0100
Rowa	0047
Royal Lux	0083, 0100
Saba	0090, 0105
Salora	0105
Samsung	0048, 0049, 0095, 0100, 0126
Sansui	0082
Sanyo	0095, 0100, 0111
Schneider	0082, 0090, 0123, 0126
Scott	0084
SEG	0111
Sharp	0106, 0107, 0111, 0130
Siemens	0101, 0102
Silver	0084, 0111
Solavox	0095, 0105

TELEVISIONS CONT...

Sonolor	0061, 0105
Sontec	0100
Sony	0024, 0061, 0111
Soundesign	0084
Sunstar	0082
Tandy	0095
Tatung	0095
TCL	0025
Teac	0056, 0057, 0083, 0125
Technics	0045
Tedelex	0059, 0074
Telefunken	0090
Teleton	0111
Teknika	0084
Tensai	0082, 0097
Tevion	0030, 0058
Thomson	0066, 0090
Tokai	0095
Tongtel	0031, 0074
Toshiba	0104, 0111
Transonic	0033, 0125
Uher	0100
Universum	0061, 0100, 0101, 0104, 0111, 0125
Victor	0106
Vue	0053, 0055
Wega	0111
Winco	0083
Yoko	0100

SATELLITE, CABLE & TOP-BOX CODES

Amstrad	1078
Atlas	1071
Aurora	1075, 1076
Austar Digital	1071, 1075
Centrex	1031
DGTEC	1001, 1037, 1073
Drake	1039
Foxtel Cable	1078
FoxtelDigital	1070
Foxtel IQ	1070
Humax	1002, 1079

SATELLITE, CABLE & TOP-BOX CODES

Ikusi	1003
JVC	1043
Kaon	1074
Kross	1034
Legend	1039
Lenoxx	1013
LG	1007
Mediastar	1008
Mentor	1080
NEC	1042
Nextwave	1010, 1012
Nordmende	1013
Omni	1014, 1081
Pacific	1015
Panasonic	1016
Philips	1043
Phoenix	1031
Pioneer	1018
RCA	1077
Samsung	1021
Soniq	1015
Sony	1022
Strong	1014, 1024, 1074
Supernet	1045
Tarbs	1080
Teac	1026, 1072
Top Line	1031
Topfield	1028
Toshiba	1029
Trio	1030
Unimax	1031
Vue	1045
Wavelength	1047
X-Winds	1032

VCR CODES

Akai	3034, 3041
Amstrad	3023
AWA	3033, 3035, 3041
Casio	3023
Daewoo	3041
Digitor	3056
DSE	3041, 3043, 3053,
Firstline	3033
Fujitsu	3023, 3033
Funai	3023
Goldstar	3033, 3036
Grundig	3024
Hitachi	3018
Hyundai	3056, 3057
JVC	3060, 3061
Kambrook	3033
KIC	3023
LG	3019, 3020, 3023, 3033, 3036, 3055
Loewe	3003
Magnavox	3041
Melectronic	3033
Mitsubishi	3023
NEC	3033, 3036, 3055
Omni	3045, 3053
Orion	3049
Palsonic	3023, 3041, 3056
Panasonic	3003
Philips	3024
Pye	3023
Samsung	3040, 3043, 3058
Sansui	3049
Sanyo	3062
Sharp	3025, 3052
Sonwa	3041
SONY	3026, 3027, 3054
Tandy	3023
Teac	3033, 3023, 3041, 3053
Telestar	3033
Tevion	3041

DVD CODES

Akai	2004, 2007, 2014
Apex	2037
Audiosonic	2005
Base	2008, 2009, 2011, 2017
Bluesky	2037
Celestial	2013
Centrex	2015, 2037
Cobalt	2010
Conia	2015, 2031, 2037
C-Tech	2038
Diamond	2038
Digitrex	2007, 2015, 2037
DVX	2038
Fisher	2142
GP	2012
Grundig	2102, 2130, 2134
Hitachi	2095, 2099, 2126, 2138
Hiteker	2037
Huyndai	2038
iN Bar	2016
JVC	2001, 3060
Kebaro	2007
Kenwood	2140
LG	2028
Loewe	2075, 2102
Magnavox	2012, 2130
Marantz	2130
Mitsubishi	2077
NEC	2029
Omni	2006
Onix	2007, 2037
Onkyo	2084, 2141
Orion	2021, 2022
Palsonic	2007, 2031, 2037, 2114
Panasonic	2068, 2088, 2124
Philips	2075, 2102, 2130, 2131, 2132
Pioneer	2126
Rowa	2014, 2015
Samsung	2127, 2128, 2129
Sansui	2022, 2032, 2038
Sanyo	2142
Sharp	2037, 2122, 2123

DVD CODES CONT.

Shinco	2143
Sony	2086, 2096, 2103
Spectra	2038
Starmedia	2038
Teac	2014
Tedalex	2038
Tevion	2015, 2038
Thomson	2133
Toshiba	2069, 2091
Victor	2037
Xlogic	2038
Yamaha	2124, 2131, 2132, 2137

VCR/DVD COMBINATION CODES

Digitor	3056
DSE	3053
Hyundai	3056, 3057
JVC	3060
LG	3055
NEC	3055
Omni	3045, 3053
Orion	3049
Palsonic	3056
Samsung	3043, 3058
Sansui	3049
Sharp	3052
Sony	3054
Teac	3053

AUDIO CODES

Aiwa	4001
Akai	4002, 4041
Celestial	4025
Denon	4003
Dev. One	4026
DSE	4027
Hyundai	4004, 4028
JVC	4042
Kenwood	4020, 4022
Lennox	4005
LG	4029, 4038, 4059
Luxman	4006, 4007

AUDIO CODES CONT...

Marantz	4056
Nakamichi	4056
Onkyo	4023
Otic	4030
Panasonic	4031, 4032
Philips	4033
Pioneer	4008, 4039, 4048, 4049
Reoc	4053
Sansui	4034, 4056
Sony	4010, 4024, 4035, 4036, 4043, 4044, 4058
TDK	4012
Teac	4041, 4047, 4055
Vorx	4013
Voxson	4054
Wintel	4053
XMS	4017, 4051, 4052
Yamaha	4018, 4037, 4040, 4046

MISC. AUDIO CODES

Creative	4066
Kenwood	4063
Mitsubishi	4061
NEC	4062
Omni	4068
REOC	4068
Samsung	4067
Sanyo	4065
Scan	4067
TEAC	4062
Videologic	4067

CD CODES

Cambridge	5002
JVC	5008
Omni	5011, 5012
Marnatz	5002
Philips	5002
Pioneer	5003, 5009
Sansui	5005
Sony	5001
Teac	5004, 5005, 5010
Technics	5006
Yamaha	5003, 5007

30-DAY LIMITED DOUBLE YOUR MONEY BACK GUARANTEE

Crest Electronics guarantees for a period of 30 days from date of the original purchase to the original consumer purchaser.

That the RCP8 Universal Remote Control will control any INFRARED remote- controlled TV, VCR, DVD or Satellite Receiver manufactured for retail sale in Australia.

In the event that your RCP8 Universal Remote Control will not control your Device(s), you must call our National Toll-Free Number 1 800 812 261 and provide the following Information:

- a) Date of Original Purchase.
- b) Name of Retail Location.
- c) Manufacturer's Name and Model number of the device(s) that the RCP8 Universal Remote Control will not control.

Upon the receipt of the above information Crest Electronics, will determine at that time if we can provide you with another Universal Remote Control that will control your device(s). If we can provide you with another universal remote control that will control all of your devices, we will ask you to: Return to Crest Electronics the RCP8 Universal Remote Control (in good working condition) together with the original packaging and all materials, along with your proof of retail purchase the, original manufacturers' remote (in good wroking condition) and model number of the device(s) the RCP8 Universal Remote Control will not control.

If Crest Electronics determines that it cannot provide you with a remote control that will control all of your devices you will be required to:

Upon receipt of your RCP8 Universal Remote Control and, Crest Electronics will send you a cheque for double the retail amount paid by you for the purchase of the RCP8 Universal Remote Control.

The Following Important Information:

- a). This guarantee shall only be applicable for retail purchasers of INFRARED remote-controlled Device(s) excluding Audio Receivers manufactured for retail sale in Australia or New Zealand

b). This guarantee does not apply to any defective product (to which our normal warranty applies) and any product damaged by accident, misuse, abuse, improper battery installation, fire, water, lightning, or other acts of God. This guarantee does not cover cartons, carrying cases, batteries, broken or marred cabinets, missing packaging or missing instructions.

c). This guarantee only applies to the original purchaser of the RCP8 Universal Remote Control and does not apply to any product after the initial 30 days from the date of retail purchase to the original retail purchaser and this offer is limited to one (1) refund per family.

This guarantee specifically excludes:

- Non-remote operated TV's, VCR's, DVD's and Satellite/Cable Receiver boxes.
- Wired remote operated TV's, VCR's, DVD's and Satellite/Cable Receiver boxes.
- All TV's, VCR's, DVD's and Satellite/Cable Receivers Not mfg. for use in Australia by an ABA licensed service provider
- Products that operate over 100kHz (Bang & Olufsen)
- Any peculiarity due to the original manufacturer's design such as channel up and down on some models of TV
- Commercial use of product (eg. Retail outlets, hotels/motels, schools etc.)
- Only basic TV functions are applicable (per device)

TV: volume Up/Down, mute, channel +/-, power, digits 0-9, AV, Menu and Navigation Keys

VCR: power, 0-9 digits, channel up, channel down, play, stop, forward, rewind, record, pause, TV/VCR

DVD: power, menu, menu navigation, OK/enter, play, stop, forward, rewind, pause

SAT: power, volume up, volume down, 0-9 digits, channel up, channel down, mute

NB: The above "basic functions" are only applicable where the original remote had identical function

THIS GUARANTEE IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES. GUARANTEES, INCLUDING WITHOUT LIMITATIONS, WARRANTIES OF MERCHANTABILITY OR FITNESS OR ANY PARTICULAR PURPOSE. IN NO EVENT SHALL CREST ELECTRONICS BE LIABLE FOR LIQUIDATED, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

THE GUARANTEE PROVIDED BY CREST ELECTRONICS WILL CONTINUE UNTIL THE 31ST DAY OF DECEMBER 2006 OR UNTIL CREST ELECTRONICS REVOKES OR TERMINATES THIS GUARANTEE WHICH MAY BE DONE SOLELY AT THE DISCRETION OF CREST ELECTRONICS AND WITHOUT FURTHER NOTICE

WARRANTY

Crest Electronics warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal use for a period of three (3) months from the date of the original purchase. Product will be replaced free of charge if it has been proven to be defective within the three (3) month period when said product is returned at customer expense within the warranty period.

THIS WARRANTY DOES NOT COVER ANY EXPENSES INCURRED IN THE REMOVAL AND REINSTALLATION OF THIS PRODUCT.

This warranty does not cover damage or failures caused by products or services not supplied by Crest Electronics, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, fire, water, lightning or other acts of God.

This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets, or any other items used in connection with the product.

There are no express warranties except as listed above. CREST SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE.

Some countries do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from country to country.

To obtain warranty service during the warranty period, please carefully pack the product and send it prepaid and adequately insured to the address below, together with your purchase receipt or other proof of the date of original purchase.

In Australia:

Crest Electronics

Importers & National Distributors

165 South Pine Road

P.O. Box 5658

Brendale - BC4500 Queensland

IMPORTANT:

IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD, YOU MUST INCLUDE YOUR PURCHASE RECEIPT so that we may establish your eligibility for service and can replace your unit without cost. It would be helpful if you included a note detailing the problem.

IF THE UNIT IS RETURNED FOR SERVICE OUTSIDE THE WARRANTY PERIOD, please include a cheque to cover the cost of replacement, handling and return postage. (Prices may differ per area.)

NOTHING IN THIS GUARANTEE AFFECTS YOUR STATUTORY RIGHTS.

The DDB and Australian Designed logo's are a trademark of CREST ELECTRONICS.

Copyright 2006 by Crest

All rights are reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language or computer language, in any form or by any means, electronic, mechanical, or otherwise, without the prior written permission of Crest Electronics.

ADDITIONAL INFORMATION

The Crest RCP8 Universal Remote Control does not have any user serviceable parts. Opening the case, except for the battery cover, may cause permanent damage to your remote control.

No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of CREST

