

CREST

UNIVERSAL

Remote Control



USER MANUAL

RCS4

TABLE OF CONTENTS

INTRODUCTION	2
FEATURES AND FUNCTIONS.....	3
DEVICE PROGRAMMING	4
CODE SEARCH	5
PROGRAMMING A SECOND TV.....	5
ACTIVATING VOLUME LOCK	6
DE-ACTIVATING VOLUME LOCK	6
LEARNING	6
DELETING A LEARNED KEY	7
DELETING ALL LEARNED KEYS FROM DEVICE ..	7
TROUBLE SHOOTING	7
CUSTOMER SERVICE	8
SETUP CODES	9
TELEVISIONS	9
SATELLITE, CABLE & TOP-BOX CODES.....	14
VCR CODES.....	15
DVD CODES.....	16
WARRANTY	18

INTRODUCTION

The RCS4 Universal Remote Control by CREST Electronics with Dynamic Database Technology™ is the latest generation universal remote designed specifically for the Australian market place.

Consolidating your remote controls has never been easier. With the RCS4's preprogrammed library of codes for TV's, VCR's DVD, and Satellite converters and learning, consolidation is only steps away. Please read the enclosed instructions carefully and retain for future use.

INSTALLING BATTERIES

1. Pull back the remote controls battery cover and remove it
2. Insert two (2) new "AAA" batteries according to the + and - marks in the battery case
3. Push the battery cover back into place
4. Test the unit by pressing the Power key. If the batteries are inserted properly LED will light

NOTE: When the batteries need to be replaced, the remote control will stop working. Replace the old batteries and the unit will be restored to its full functionality.

FEATURES AND FUNCTIONS



Use the POWER key to turn on or off the selected device.



 
Use the Device Select left and right keys to change the device being controlled.



Press the 16:9 key to change the aspect ratio/picture format on your TV (Not available on all TV's)



Press the SLEEP key to activate the sleep timer of your TV. (Not available on all TV's)



The digit keys are used to program the remote control and operate identically as your remote controls



 
Use the AV key to change the Video input on your TV



Use the -/-- to switch between one and two digit channel entry



Press the MUTE key to turn on or off the sound of the selected device



Use VOL + (or VOL-) keys to raise or lower the sound of the selected device



Press the Return key to switch between two programs



Use the CH + (or CH-) keys to the select the next higher or lower channel



Use the CURSOR keys to navigate and select items in the on screen menu or guide

FEATURES AND FUNCTIONS



Use the MENU key to access the on screen menu or guide of your TV, VCR, DVD or Satellite



The Red, Green, Blue and Yellow Keys allow you to access the Fast-Text functions of your TV as well as additional functions of your Satellite (Fast-Text is not available on all TV's)



The Teletext keys are used to access the teletext features on your TV (Teletext is not available on all TV's, please consult the owners manual of your TV for complete operation)



The PLAY, STOP, REWIND, FAST FWD, REWIND and RECORD keys operate identically as your original DVD or VCR remote control

DEVICE PROGRAMMING

The Crest RCS4 Universal Remote Control come pre-programmed with the most popular TV, VCR, DVD and Satellite codes used in Australia.

Using pages 9-14, find the brand and device codes to

1. Turn on the Device to be programmed
2. Use the Device Select Left or Device Select Right keys to select the device you want to program.
3. Press and hold SETUP key for 3 sec until LED flashes twice and release SETUP key
4. Enter 4 Digit Number as per the information shown in Brand list
5. If the Setup is OK, the LED will flash 2 times.
6. Aim the remote at the device and press Power, if the device turns off you have found the correct code. If the device does not respond, repeat steps 3 through 5 using the next code listed for your brand.

CODE SEARCH

If the device you are trying to program does not work with the codes listed or if your brand is not listed try code search

1. Turn On the target Device
2. Use the Device Select Left or Device Select RIGHT keys to select the device you want to learn the new function.
3. Press and hold SETUP key for 3 sec until LED flashes twice and release SETUP key
4. Press the MUTE and OK key at the same time, the LED will flash 2 times and remain ON to indicate the SEARCH mode is ready
5. Aim the Remote control at the device and press the Cursor Up key. If the device turns off, immediately stop and move on to step 6.

If the device does not respond, continue pressing and releasing the Cursor Up key until the device turns off

6. Press and release the OK key to save the code

-If you cannot control the device properly, you might have found the incorrect code and will need to continue searching until you find the code that works properly.

PROGRAMMING A SECOND TV

With the new Crest RCS4 universal remote control, you can program any device type under any device position. This remote control utilize a device identifier to determine what type of device you are programming. The device type identifiers are as follows:

- 0= TV
- 1= SATELLITE or TOP-BOX
- 2=DVD
- 3=VCR

For example, to program a second TV under the SAT device position follow these instructions:

1. Turn on the TV to be programmed
2. Use the Device Select Left or Right keys to select SAT
3. Press and hold SETUP key for 3 sec until LED flashes twice and release SETUP key
4. Enter 4 Digit Number as per the information shown in Brand list

5. If the Setup is OK, the LED will flash 2 times.
6. Aim the remote at the device and press Power, if the Device turns off you have found the correct code. If the device does not respond, repeat steps 3 through 6

ACTIVATING VOLUME LOCK

Volume lock will allow you to select the source in which you want to control the volume. For example, if you always use the TV to control the volume, you can configure the RCS4 so that regardless what device mode is selected (e.g. VCR, DVD or SAT), when you press the volume +/- or Mute keys you will always have control of the TV's volume. To activate volume lock, use the following instructions:

1. Press and hold SETUP key for 3 sec until LED flashes twice and release SETUP key
2. Press the desired Device Type number (0: TV, 1: SAT/CAB, 2: DVD or 3-VCR).
3. Press Vol up key, The LED will flash twice

DE-ACTIVATING VOLUME LOCK

1. Press and hold SETUP key for 3 sec until LED flashes twice and release SETUP key
2. Press SETUP and Mute at the same time, the LED will flash twice

LEARNING

The RCS4 includes a powerful learning feature to allow optimal customization of your new universal remote control. This feature will allow you to add unique functions from your original remote control onto the RCS4 for the complete solution in controlling all of your audio video devices.

1. Use the Device Select Left or RIGHT keys to select the device you want to learn the new function
2. Press and Hold in the SETUP and MENU keys together until the LED under the selected device starts flashing.
3. Press the desired key until LED stays lit
4. Point the original remote to the front part of the RCS4, Press the desired key to learn on the original remote control.

LEARNING CONT...

5. When Capture of the code is successful, LED will show a SLOW flashing , after that it will indicate the normal flashing cycle of Learning mode
6. Repeat the above procedure until all the desired code has been learned.
7. To exit the learning mode, press and hold the SETUP and MENU keys and release.
8. To Learn keys into under a different device mode, repeat steps 1 through 7 substituting the new device in step 1.

- The RCS4 can store over 60 learned keys in its memory
- Learned keys can only be transmitted from the mode in which they were learned
- Due to the varying frequencies used to control devices, it is possible that some commands cannot be learned properly.

DELETING A LEARNED KEY

1. Use the Device Select Left or Right keys to select the device you want to delete the learned function.
2. Press and Hold in the SETUP and MENU keys together until the LED under the selected device starts flashing.
3. Press and hold down the device select left key and the key to be deleted until the led flashes twice and release both keys.
4. Repeat step 3 to continue deleting keys.
5. Press and release SETUP + MENU to exit.

DELETING ALL LEARNED KEYS FROM DEVICE

1. Use the Device Select Left or Right keys to select the device you want to delete all learned functions.
2. Press and Hold in the SETUP and MENU keys together until the LED under the selected device starts flashing.
3. Press and hold down the device select left key and the device select right key until the led flashes three times and release both keys

TROUBLE SHOOTING

PROBLEM: The Red LED does not blink when you press a key.

SOLUTION: Replace the batteries with two (2) new AAA batteries.

PROBLEM: During programming, a LED does not flash three times

SOLUTION: An invalid entry has occurred. Check the code to be entered and try programming again.

TROUBLE SHOOTING CONT...

PROBLEM: The LED blinks when you press a key, but the device does not respond.

SOLUTION: Make sure the remote control is aimed at the device you are trying to operate

PROBLEM: The remote control does not control the device selected or the commands are not working properly.

SOLUTION: Try all listed codes for the device being set up. Make sure they can be operated with an infrared remote control

CUSTOMER SERVICE

If you have any questions about the operation of your new RCS4 Universal Remote Control, you may call our Customer Service for assistance. Before calling please read this manual carefully to find an answer to your question. If you cannot find a solution in this manual, please complete the information below on all your equipment before calling:

Date of purchase / /

 Day / Month / Year

A list of your equipment/models: (see example below)

Type	Brand	Model No.	Remote Model No.	RCS4 Code
TV	Saba	TCW 301	MB 100	0648 (ex)

Type/model numbers can often be found in your equipment owner's manual or on the factory plate behind the device.

In Australia: 1 800 812 261
opening hours: 8.00 am- 5.00 pm (Mon-Fri.)

For WEB Support:
www.crestonline.biz

SETUP CODES

TELEVISIONS

Acec	0123
Acer	0034
Aea	0057
Aiko	0082, 0095, 0110
Aim	0057
AKAI	0001, 0056, 0057, 0059, 0081, 0082, 0093, 0095, 0096, 0097, 0105, 0110, 0126
Akura	0083, 0110
Alaron	0084
Alba	0082, 0100, 0110, 0111
Amplivision	0100
Amstrad	0082, 0083, 0110
Anitech	0086, 0110
Ansonic	0098, 0100, 0103, 0110, 0123
ASA	0104
Asberg	0086
Asora	0110
ATD	0056
Audiosonic	0088, 0100
Audioton	0100
Audioworld	0056
Autovox	0086, 0129
AWA	0002, 0056, 0057, 0071, 0083, 0096, 0110, 0111, 0112
Baird	0088, 0090, 0095
Base	0036, 0038
Baseline	0057, 0110
Baur	0061, 0101, 0102, 0125, 0127
Beko	0057, 0096, 0100
BENQ	0069, 0070
Best	0100
Bestar	0100
Blaupunkt	0101, 0102
Blue Sky	0094
Brandt	0088, 0091, 0092
Bush	0057, 0082, 0085, 0110, 0111
Carena	0094
Celestial	0003, 0004, 0062, 0113
Centrex	0056
CGE	0086, 0100
Clarivox	0104
Clatronic	0082, 0086, 0098, 0100, 0110

TELEVISIONS CONT....

Condor	0098, 0100, 0110
Conia	0039, 0058
Cont. Edison	0088, 0091, 0092
Crosley	0086
Crown	0086, 0100, 0106, 0110
Daenyk	0084
Daewoo	0057, 0110
Dansai	0083, 0110
Daytron	0110
De Graaf	0105
Decca	0056, 0095
Denon	0116
Diamond	0056
Digital Life	0074, 0075
Digitor	0056, 0057
Dual	0090
Dumont	0095, 0104
Dux	0123
Elbe	0100, 0103
Elcit	0098
Elin	0105, 0110
Emerson	0082, 0084, 0104
Euroman	0100
Europhon	0098
Ferguson	0088, 0092
Fidelity	0082
Finlandia	0105
Finlux	0084, 0086, 0095, 0098, 0104
Firstline	0085, 0095, 0098, 0110
Fisher	0095, 0100, 0111, 0112
Fujitsu	0084, 0095, 0098, 0110, 0129
Funai	0084, 0085
Galaxis	0098, 0100
GE	0088, 0090, 0092
GEC	0095, 0115
General	0088, 0092, 0110
Genxxa	0083
Goldstar	0097, 0100, 0110
Goodmans	0082, 0084, 0090, 0110, 0111, 0126
Gradiente	0106

TELEVISIONS CONT....

Graetz	0082
Granada	0086, 0095, 0099, 0111, 0121, 0123
Grundig	0086, 0101, 0102, 0104, 0126
Haier	0010, 0056
Hanimax	0085
Hanseatic	0085, 0100, 0103, 0110
Harwood	0083, 0110
HCM	0083, 0110
HiFivox	0088, 0091
Hinari	0084, 0110, 0111
Hisawa	0094
Hisense	0064, 0079
Hitachi	0046, 0072, 0073, 0090, 0095, 0099, 0105, 0111, 0115, 0116, 0117, 0118, 0119, 0120, 0126
Hitsu	0094, 0110
Hypson	0094
Hyundai	0056
ICE	0082, 0110
Imperial	0086, 0100
Inno Hit	0086, 0095, 0110
Interfunk	0088, 0091, 0100, 0123, 0125
Intervision	0082, 0094, 0097, 0098, 0100
Irradio	0086, 0110
ITS	0082, 0084, 0105
ITT	0084, 0105
ITT Nokia	0084, 0096, 0105
JVC	0065, 0082, 0096, 0106, 0107, 0111
Kaisui	0094, 0110
Karcher	0098, 0100
Kendo	0097, 0098, 0100
Kolster	0098
Konka	0058, 0082
Korting	0100
Kotron	0083
Kross	0041
Kyoshu	0083
LG	0014, 0078, 0097, 0100, 0110
Lifetec	0110, 0125
Loewe	0100, 0103, 0125
Logik	0082

TELEVISIONS CONT....

Lumatron	0129
Luxor	0084, 0105
Magnafon	0086, 0098
Magnavox	0018, 0084, 0111
Manseth	0085
Masuda	0082, 0110
Matsui	0082, 0085 0094, 0095, 0101, 0110, 0111, 0126
M-Electronic	0088, 0090, 0110, 0125
Memorex	0045, 0110
Metz	0101, 0102
Minerva	0086, 0101, 0102, 0104
Minoka	0083
Mistubishi	0099, 0111, 0125
Mivar	0086, 0100, 0103
Multitech	0098, 0100, 0110
MTC	0100, 0125
NEC	0019, 0057, 0060, 0076, 0077, 0094, 0110, 0111
Neckerman	0061, 0100, 0102, 0126, 0127
NEI	0082
Nikkai	0095, 0110, 0111
Nobliko	0086, 0098, 0104
Nogamatic	0088, 0091
Nokia	0096, 0105
Normende	0088, 0090, 0091, 0092, 0101
Oceanic	0085, 0119
Okano	0095, 0100
Omni	0074
Onwa	0081, 0082
Osaki	0083, 0095
Osume	0095, 0111, 0112
Otto Versand	0061, 0085, 0088, 0101, 0102, 0111, 0121, 0125, 0126, 0127
Palsonic	0083, 0097
Panasonic	0043, 0045, 0105, 0109, 0121
Pathe Marconi	0088, 0091
Perdio	0095
Philco	0086, 0100, 0116
Philips	0090, 0102, 0115, 0123, 0126
Pioneer	0088, 0090, 0100
Pretech	0083, 0098, 0110

TELEVISIONS CONT....

Profitronic	0098
Proline	0095, 0123
Prosonic	0082, 0100
Quasar	0045
Quelle	0088, 0101, 0102, 0104, 0111, 0125, 0127
Radiotone	0083, 0100, 0110
Rediffusion	0105, 0111
Revox	0100
RFT	0095, 0100, 0103
Roadstar	0110
Rowa	0047
Royal Lux	0083, 0100
Saba	0088, 0090, 0091, 0092, 0105
Sagem	0094
Saisho	0110
Salora	0105
Sambers	0086, 0098
Samsung	0048, 0049, 0080, 0095, 0100, 0110, 0126
Sansui	0082
Sanyo	0064 0095, 0100, 0103, 0110, 0111, 0112
Schuab Lorenz	0096, 0105
Schneider	0082, 0090, 0123, 0126
Scott	0084
SEG	0098, 0110, 0111
SEI	0085, 0098, 0127, 0129
Sharp	0085, 0106, 0107, 0111, 0112, 0130
Siemens	0101, 0102, 0112
Silver	0084, 0111
Singer	0098, 0111
Sinudyne	0085, 0098, 0127, 0129
Solavox	0095, 0105
Sonolor	0061, 0105, 0127
Sontec	0085, 0100
Sony	0024, 0061, 0098, 0111, 0127
Soundesign	0084
Sunkai	0085, 0094
Sunstar	0082, 0110
Tandberg	0088
Tandy	0095
Tatung	0095
TCL	0025

TELEVISIONS CONT....

Teac	0056, 0057, 0083, 0094, 0110, 0122, 0124, 0125
Technics	0045, 0110
Tedex	0059, 0074
Teknika	0084, 0088, 0091, 0092
Telefunken	0088, 0089, 0090, 0091, 0092
Teleton	0111, 0129
Tensai	0082, 0085, 0097, 0110
Tevion	0030, 0058
Thomson	0066, 0088, 0090, 0091, 0092
Tokai	0095, 0110
Tongtel	0031, 0074
Toshiba	0062, 0063, 0079, 0098, 0104, 0111, 0113, 0114
Towada	0098
Transonic	0033, 0094, 0125
Uher	0086, 0100, 0129
Ultravox	0098
Universum	0061, 0085, 0086, 0088, 0100, 0101, 0104, 0111, 0112, 0125, 0127
Vidikron	0098
Vidtech	0111
Voxson	0086
Vue	0053, 0055
Waltham	0092
Winco	0083
Yamashi	0094
Yoko	0100, 0110
Zanussi	0129

SATELLITE, CABLE & TOP-BOX CODES

Amstrad	1078
Atlas	1071
Aurora	1075
Austar Digital	1071, 1075
Centrex	1031
Conia	1034
Conwa	1035
DGTEC	1001, 1037, 1038, 1073
Drake	1039
Foxtel Cable	1078
Foxtel Digital	1070
Humax	1002, 1079

SATELLITE, CABLE & TOP-BOX CODES

Ikusi	1003
JVC	1040
Kaon	1074
Kross	1034
Legend	1039
Lenoxx	1013, 1044
LG	1007
Mediastar	1008
Mentor	1080
NEC	1042
Nextwave	1010, 1012
Nordmende	1013
Omni	1014
Pacific	1015
Panasonic	1016
Philips	1043
Phoenix	1031
Pioneer	1018
RCA	1077
Samsung	1021
Soniq	1044
Sony	1021, 1022
Strong	1023, 1024, 1074
Supernet	1045
Tarbs	1080
Teac	1026, 1072
Top Line	1027
Topfield	1028
Toshiba	1029
Trio	1030
Unimax	1031
Vue	1045
Wavelength	1047
X-Winds	1032

VCR CODES

Akai	3034, 3041
Amstrad	3023
AWA	3033, 3035, 3041
Casio	3023
Daewoo	3041
Digitor	3056

VCR CODES

DSE	3041, 3045, 3053
Firstline	3033
Fujitsu	3023, 3033
Funai	3023
Goldstar	3033
Grundig	3024
Hitachi	3018
Hyundai	3056, 3057
JVC	3060, 3061
Kambrook	3033
KIC	3023
LG	3019, 3023, 3033, 3036, 3055
Loewe	3003
Magnavox	3041
Melectronic	3033
Mitsubishi	3023
NEC	3033, 3036, 3055
Omni	3045
Orion	3049
Palsonic	3023, 3041, 3056
Panasonic	3003
Philips	3024
Pye	3023
Samsung	3040, 3043, 3058
Sansui	3049
Sanyo	3062
Sharp	3025, 3052
Sonwa	3041
Sony	3026, 3027, 3054
Tandy	3023
Teac	3033, 3023, 3041, 3045
Telestar	3033
Tevion	3041

DVD CODES

Aiwa	2083
Akai	2004, 2007, 2014, 2106
Apex	2037
AWA	2039
Base	2008, 2009, 2011, 2017
Celestial	2012
Centrex	2015, 2037

DVD CODES CONT...

Cinevision	2028
Cobalt	2010
Conia	2007, 2015, 2031, 2037, 2041
Denon	2124, 2139
Digitrex	2007, 2015, 2037, 2042
DSE	2109
Finlux	2028
Fisher	2090, 2142
Goldstar	2028
GP	2012
Grundig	2082, 2094, 2102, 2130, 2134
Haaz	2038
Himax	2043
Hitachi	2079, 2095, 2099, 2126, 2138
Hiteker	2037
Hyundai	2038, 2110, 2111
iN BAR	2016
JVC	2001, 2072, 2089, 2097, 2101, 2105
Kenwood	2140
Kross	2044
LG	2028, 2045, 2046, 2113
Loewe	2075, 2082, 2094, 2102
Magnavox	2012, 2047, 2130
Marantz	2028, 2130
Matsui	2082
Mitsubishi	2077
Mossimo	2079
NAD	2028
NEC	2029
Nintaus	2050
Omni	2006, 2051
Onix	2007, 2037
Onkyo	2084, 2141
Orion	2021, 2022, 2082
Palsonic	2007, 2031, 2037, 2114
Panasonic	2068, 2088, 2124
Philips	2075, 2082, 2094, 2102, 2130, 2131, 2132
Pioneer	2067, 2126
RCA	2070
Rowa	2014, 2015
Salora	2028
Samsung	2078, 2079, 2127, 2128, 2129
Sansui	2022, 2038, 2052

DVD CODES CONT...

Sanyo	2032, 2090, 2142
Sharp	2037, 2122, 2123
SMC	2039
Sony	2066, 2086, 2096, 2103, 2104
Spectra	2038
Starmedia	2038
Super Digital	2054
TDE	2055
Teac	2014, 2056
Tedalex	2038, 2110
Telefunken	2116
Tevion	2015, 2038, 2039
Thomson	2080, 2133
Tongtel	2057
Toshiba	2069, 2091
Transonic	2039
Victor	2037
Viewmaster	2058, 2059, 2060
Voxson	2039, 2061, 2109
Wintel	2062
Xlogix	2038
XMS	2063, 2118, 2119, 2120
Yamaha	2064, 2076, 2124, 2131, 2132, 2137
Zenonic	2121

VCR/DVD COMBINATION CODES

Digitor	3056
DSE	3053
Hyundai	3056, 3057
JVC	3060
LG	3055
NEC	3055
Omni	3045, 3053
Orion	3049
Palsonic	3056
Samsung	3043, 3058
Sansui	3049
Sharp	3052
Sony	3054
Teac	3053

WARRANTY

Crest Electronics warrants to the original purchaser that this product will be free from defects in materials and

workmanship under normal use for a period of three (3) month's from the date of the original purchase. Product will be replaced free of charge if it has been proven to be defective within the three (3) month period when said product is returned at customer expense within the warranty period. THIS WARRANTY DOES NOT COVER ANY EXPENSES INCURRED IN THE REMOVAL AND REINSTALLATION OF THIS PRODUCT.

This warranty does not cover damage or failures caused by products or services not supplied by Crest Electronics, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, fire, water, lightning or other acts of God.

There are no express warranties except as listed above.

CREST SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE.

Some countries do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from country to country.

To obtain warranty service during the warranty period, please carefully pack the product and send it prepaid and adequately insured to the address below, together with your purchase receipt or other proof of the date of original purchase.

In Australia:

Crest Electronics

Importers & National Distributors

165 South Pine Road

P.O. Box 5658

Brendale - BC4500 Queensland

IMPORTANT:

IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD, YOU MUST INCLUDE YOUR PURCHASE RECEIPT so that we may establish your eligibility for service and can replace your unit without cost. It would be helpful if you included a note detailing the problem.

IF THE UNIT IS RETURNED FOR SERVICE OUTSIDE THE WARRANTY PERIOD, please include a cheque to cover the cost of replacement, handling and return postage. (Prices may differ per .)

NOTHING IN THIS GUARANTEE AFFECTS YOUR STATUTORY RIGHTS.

The DDB and Australian Designed logo's are a trademark of CREST ELECTRONICS.

Copyright 2006 by Crest

All rights are reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language or computer language, in any form or by any means, electronic, mechanical, or otherwise, without the prior written permission of Crest Electronics.

ADDITIONAL INFORMATION

The Crest RCS4 Universal Remote Control does not have any user serviceable parts. Opening the case, except for the battery cover, may cause permanent damage to your remote control.

No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of CREST